




DODGE SPRINTER



7-Way Trailer Tow Harness

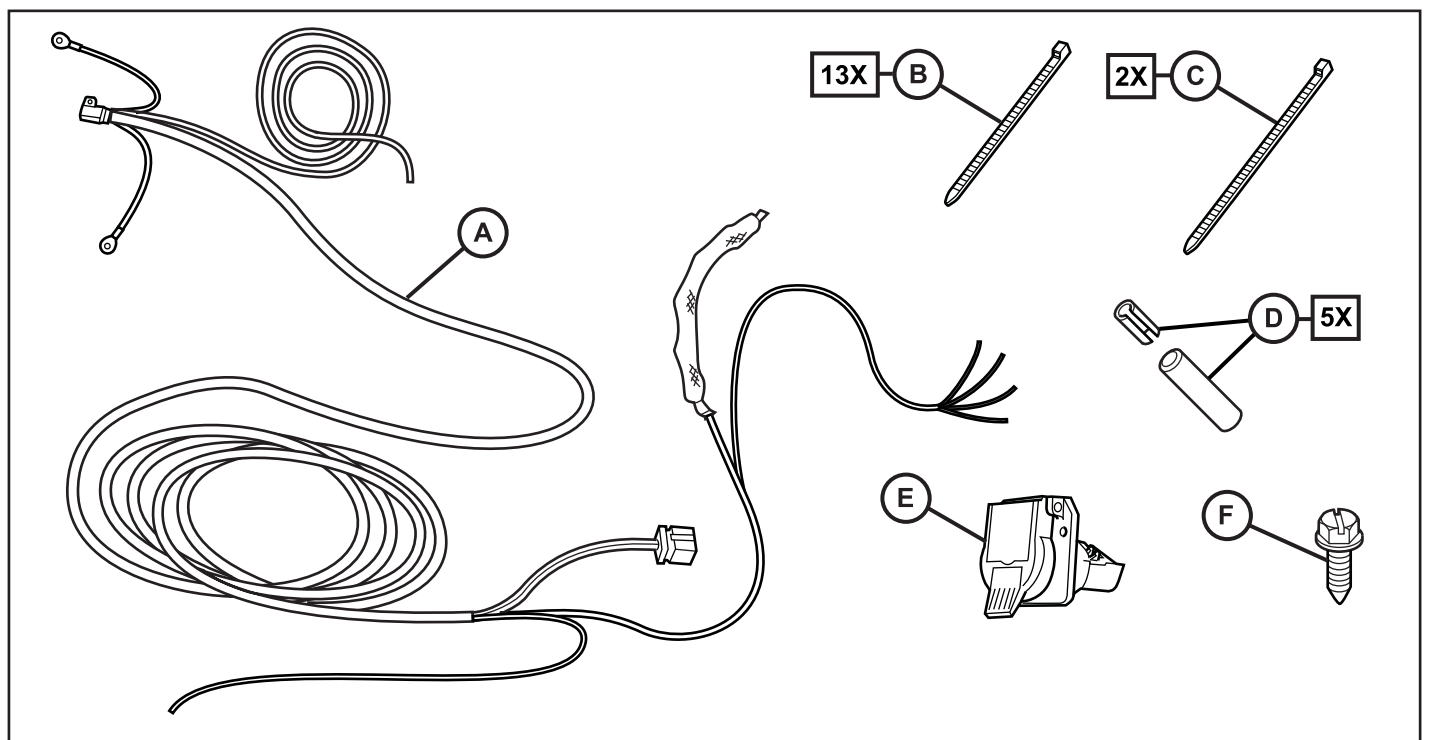


T-20 T-25 T-30 T-40 10 mm 13 mm								
1/2" (12mm)						82300508	RTV SEALANT	

STANDARD VAN


V170 EXTENDED VAN

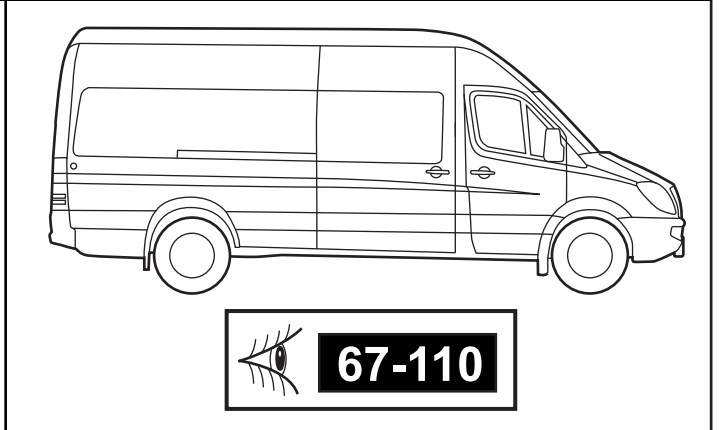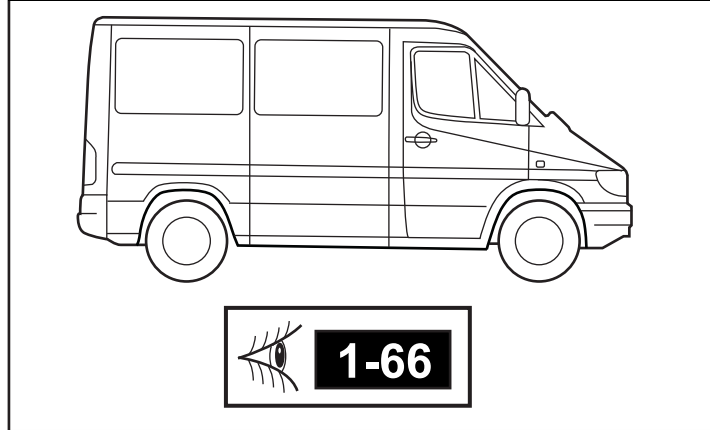


STANDARD VAN

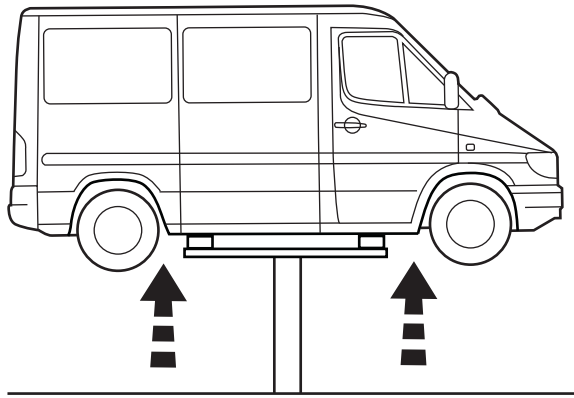


1

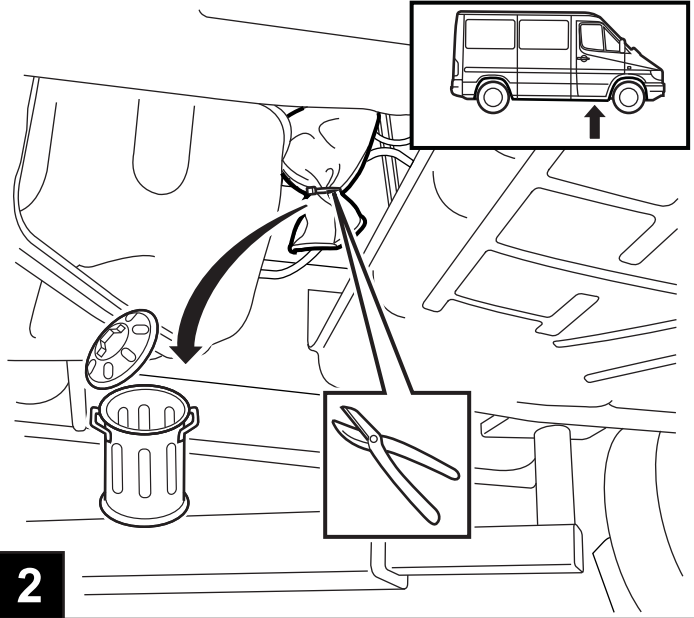


2

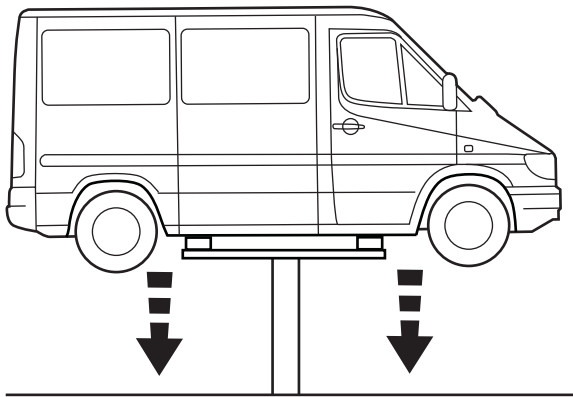


3

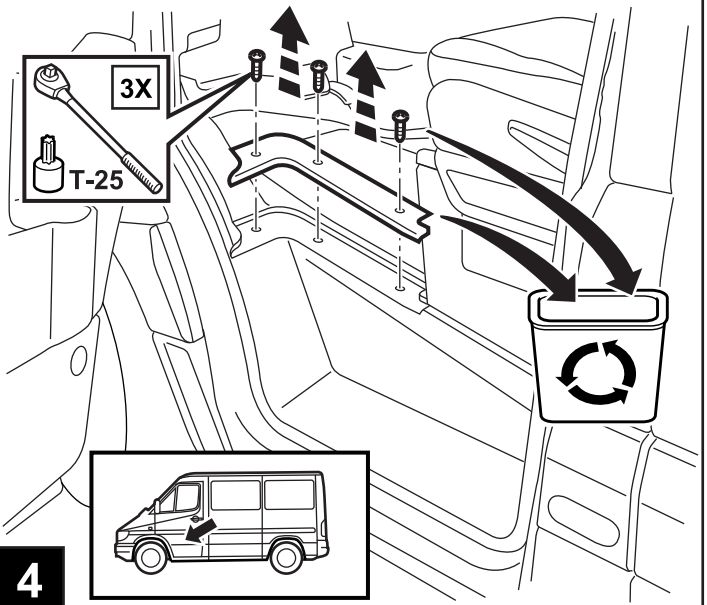


4

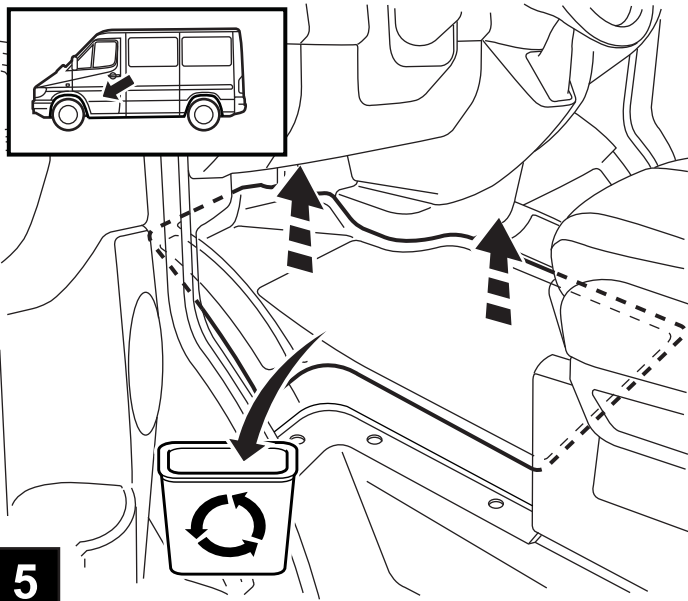


5

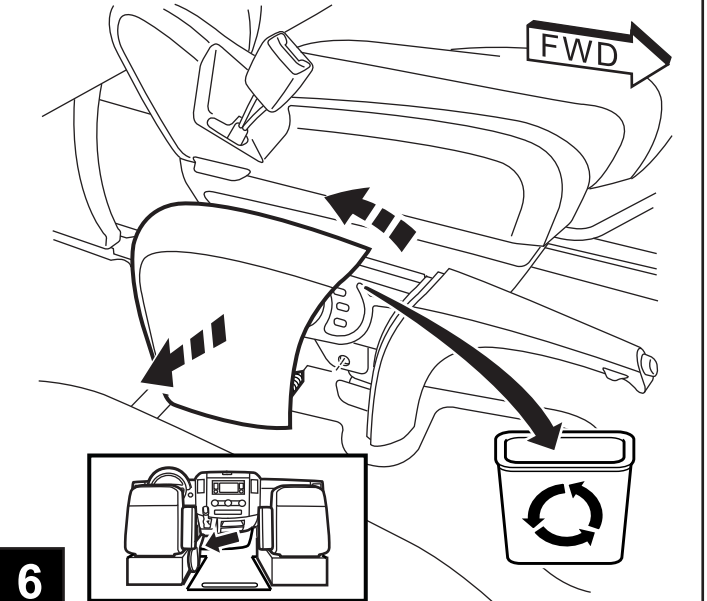


6

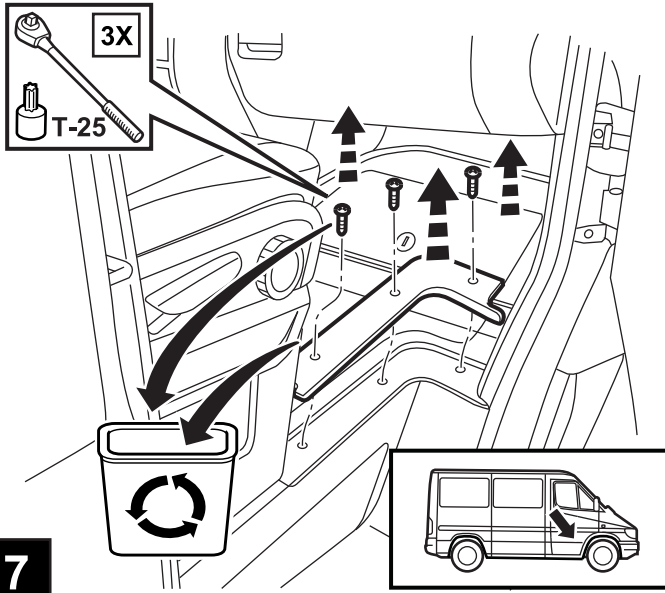


7

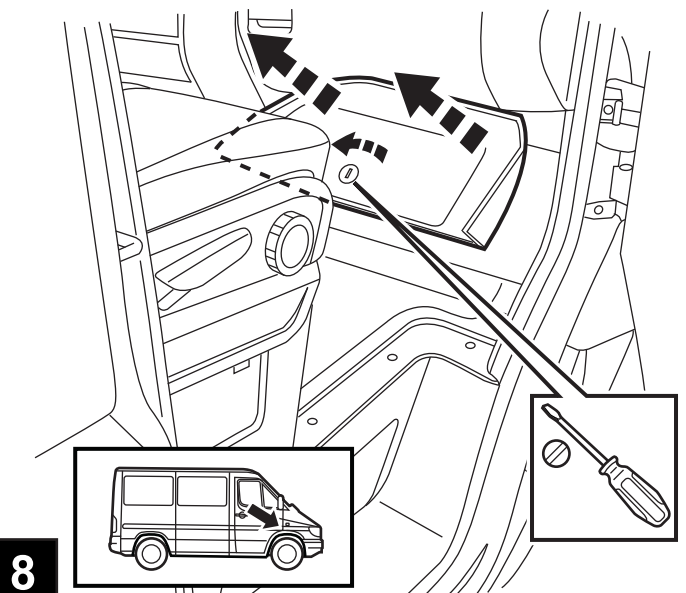


8

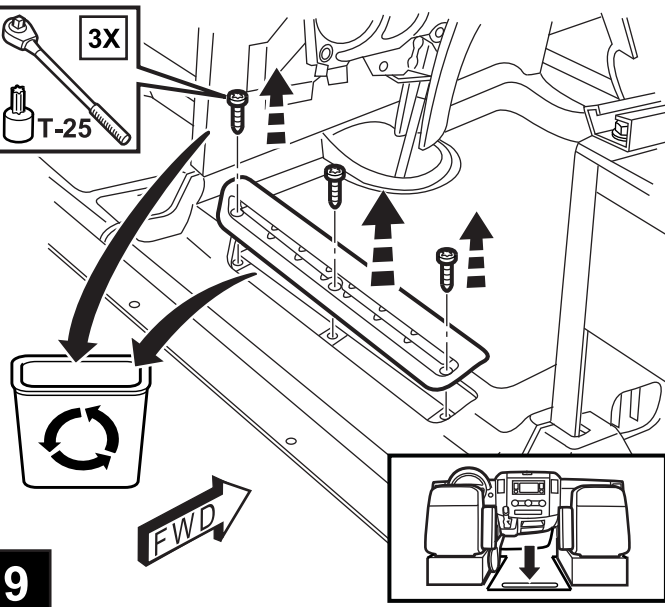


9

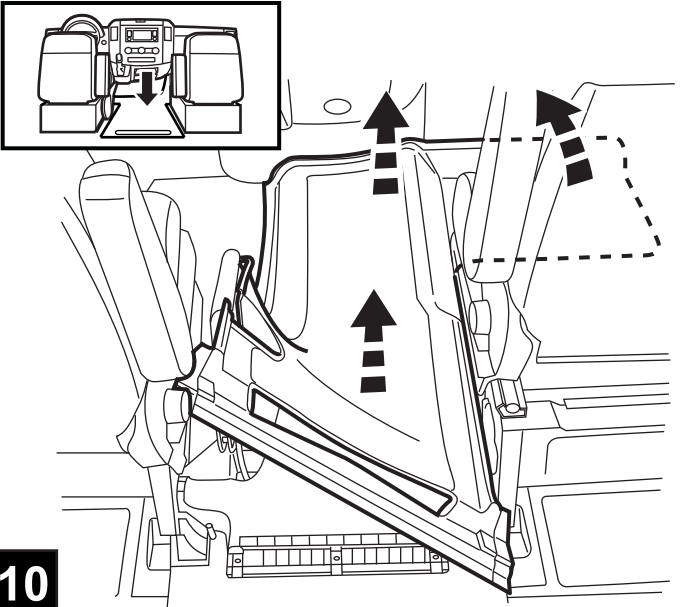

10






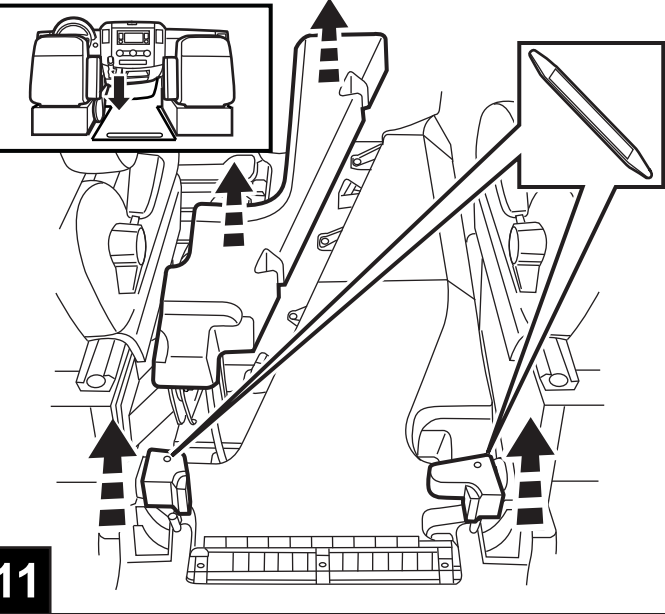







11

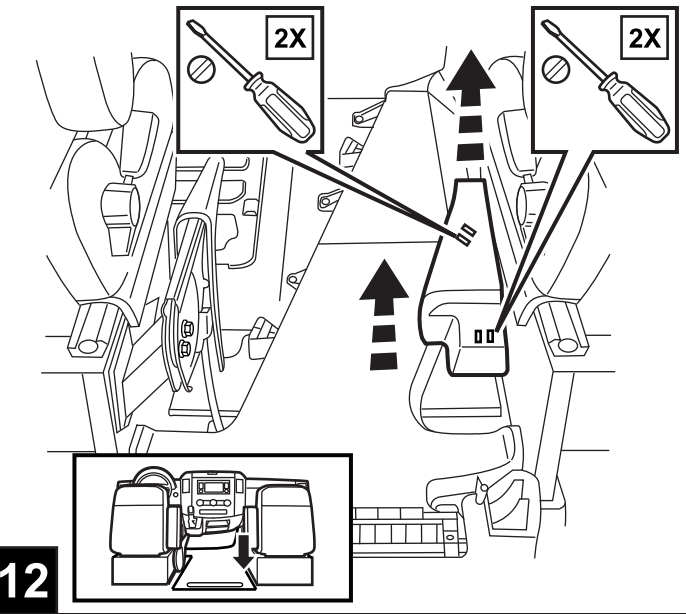


12

STANDARD VAN

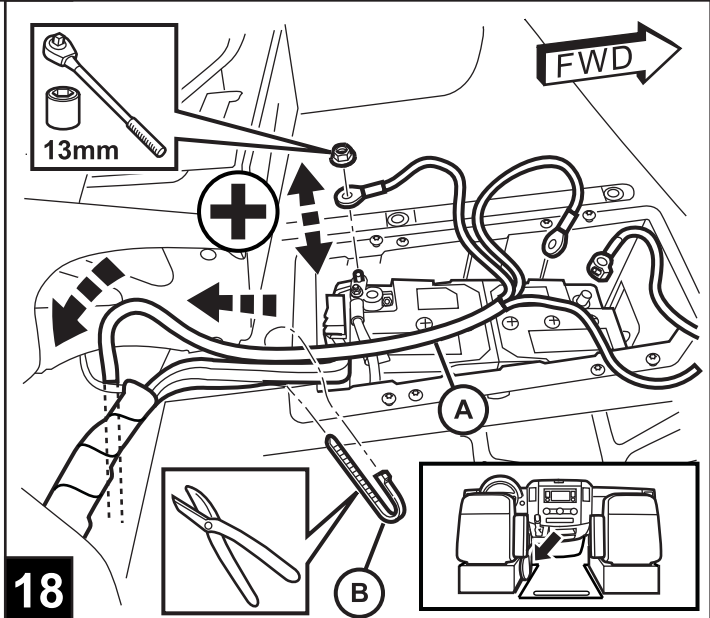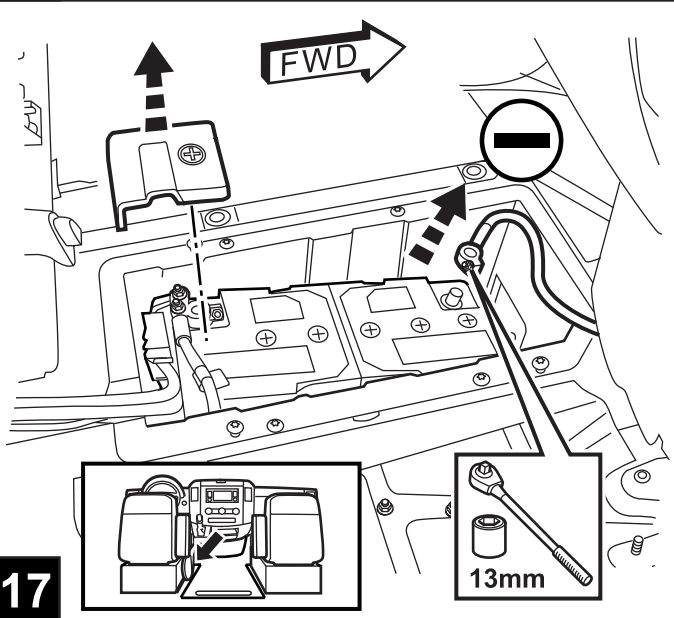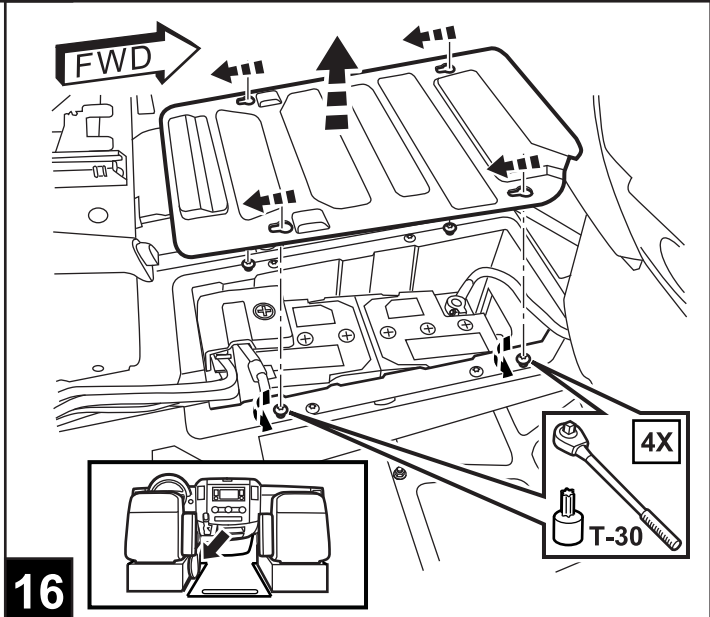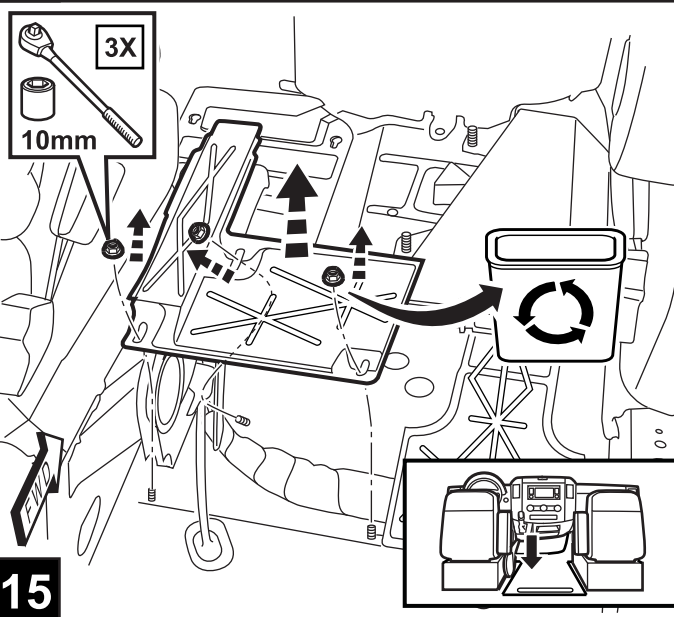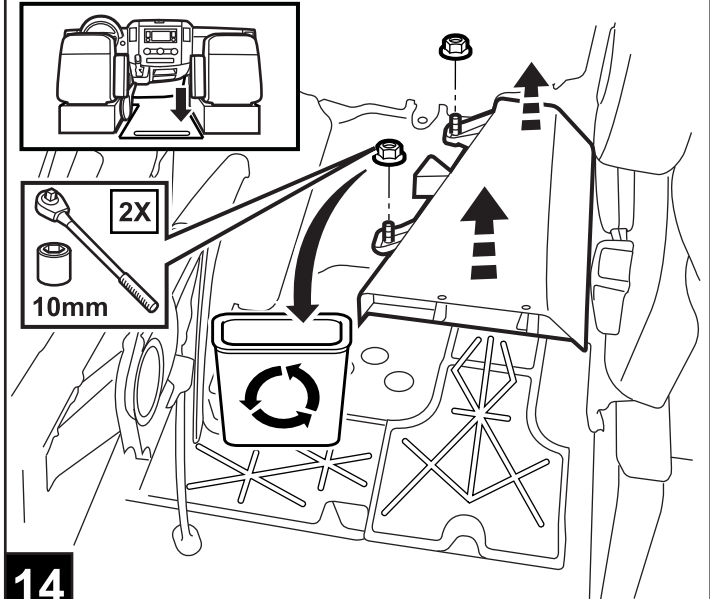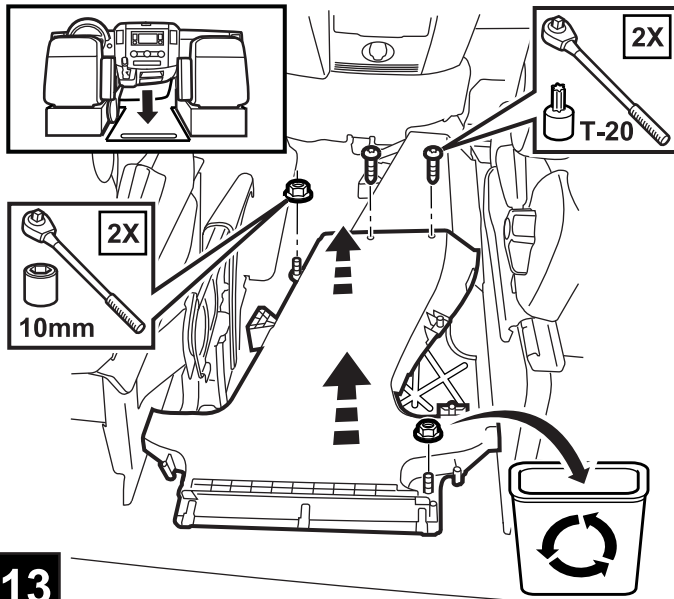


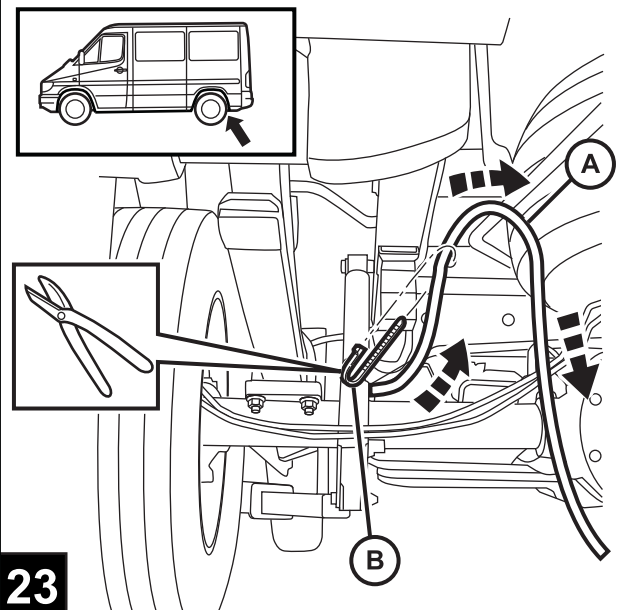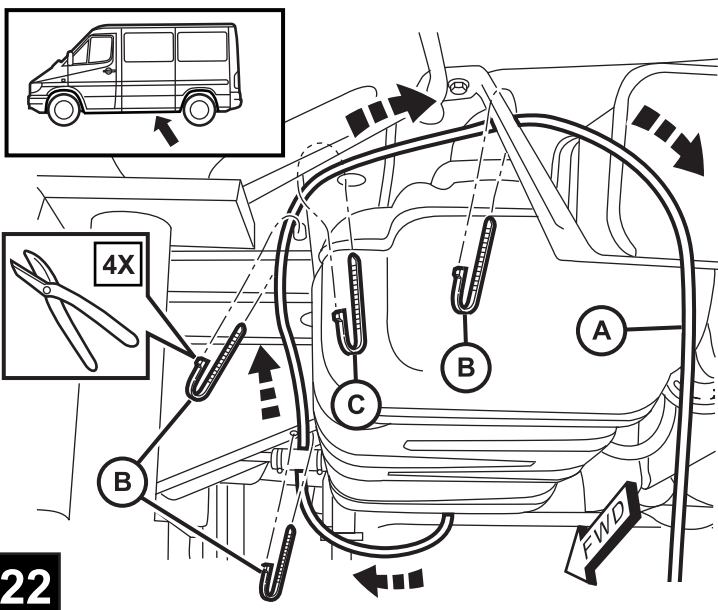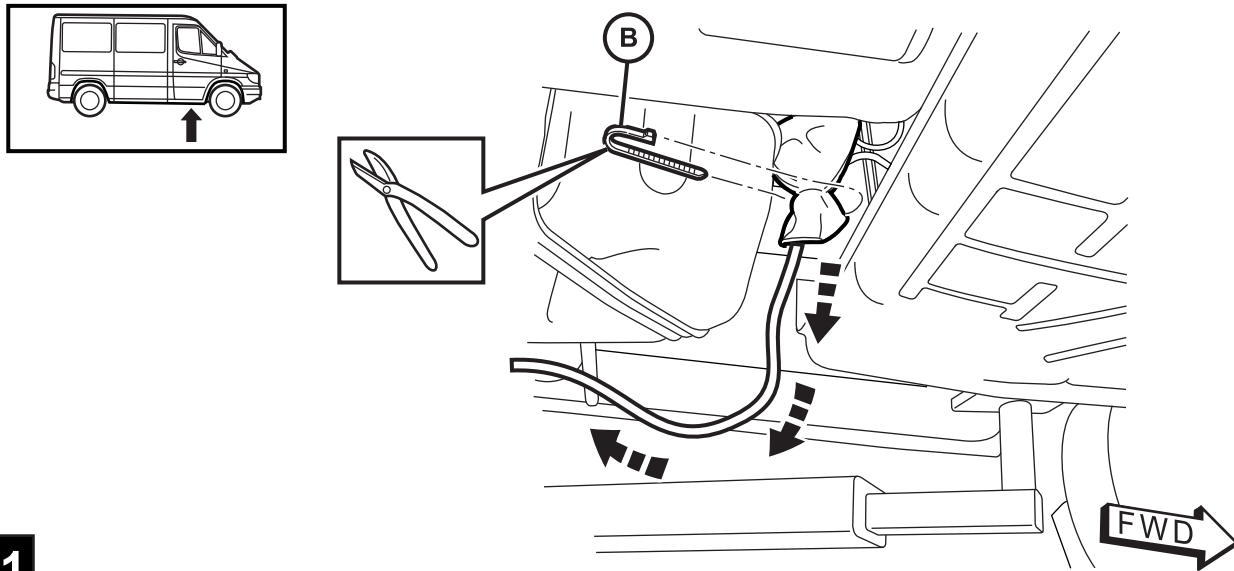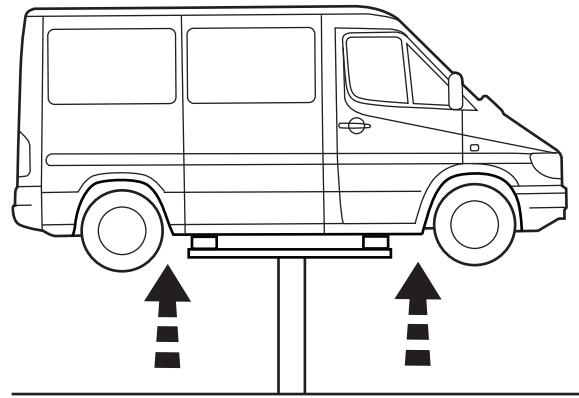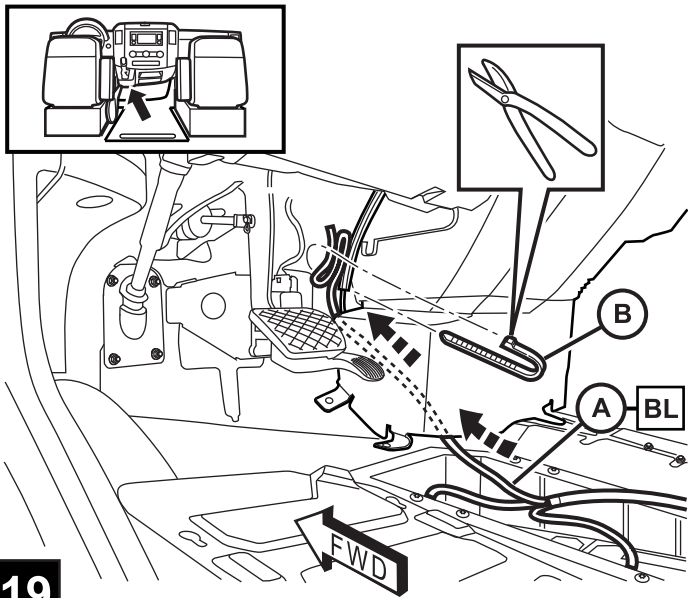


STANDARD VAN

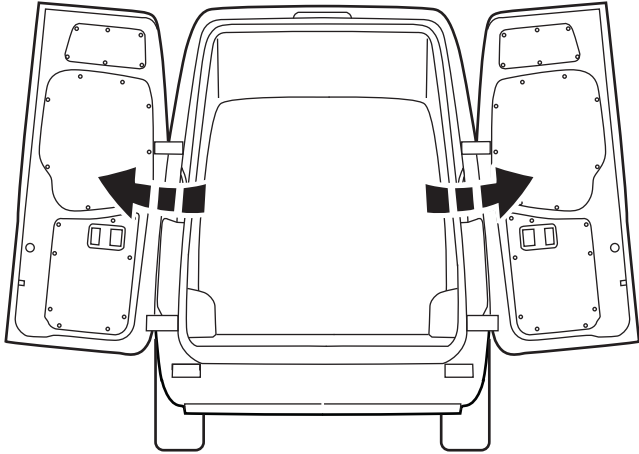


24

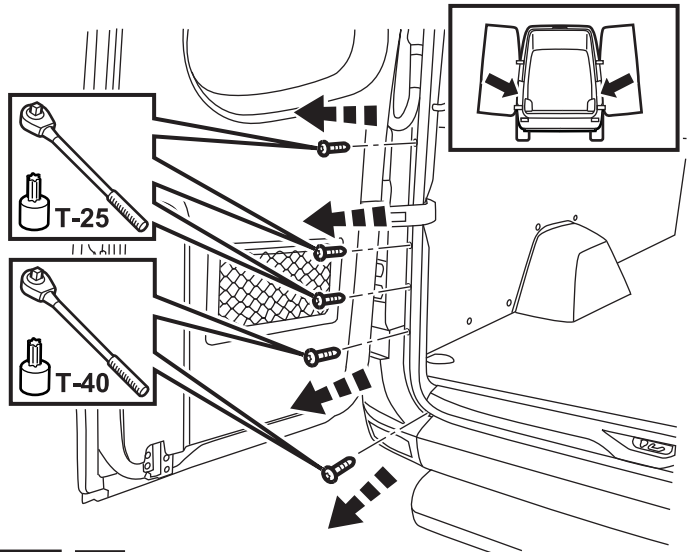


25 2X

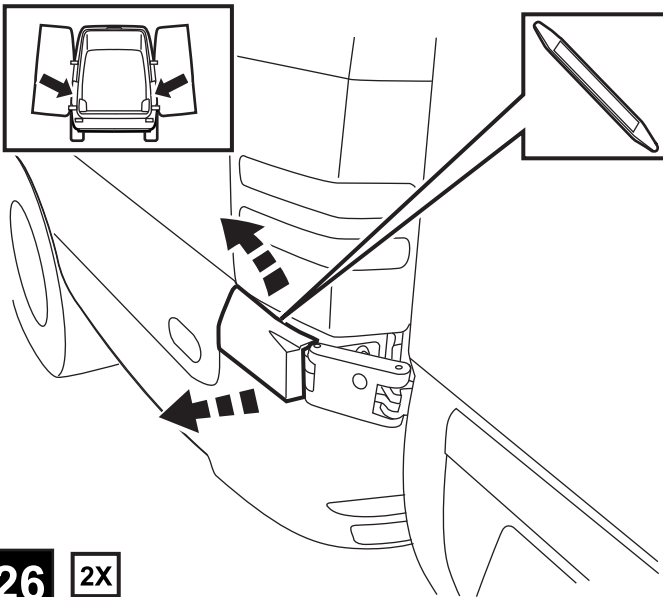


26 2X

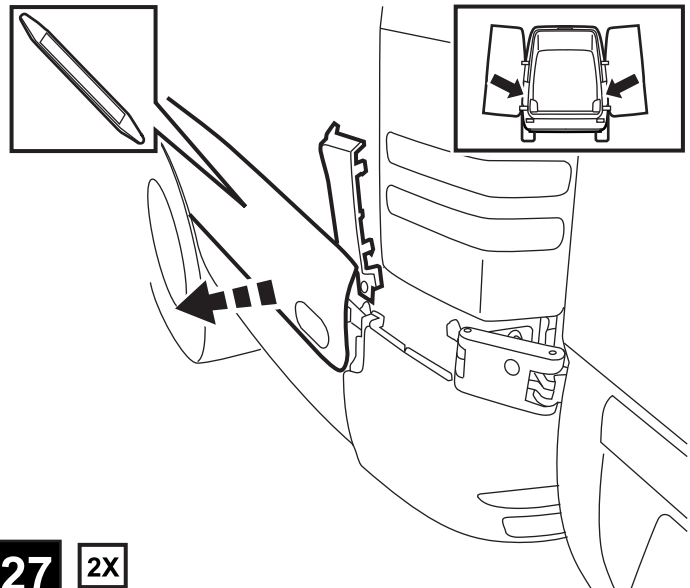







27 2X

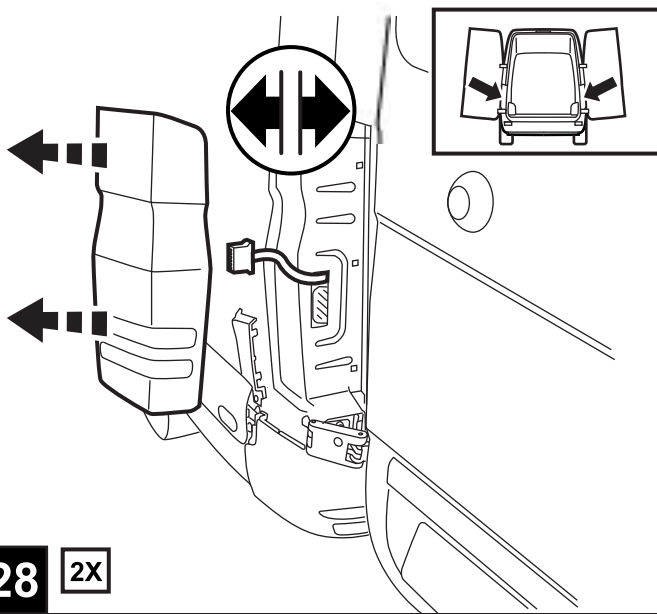







28 2X

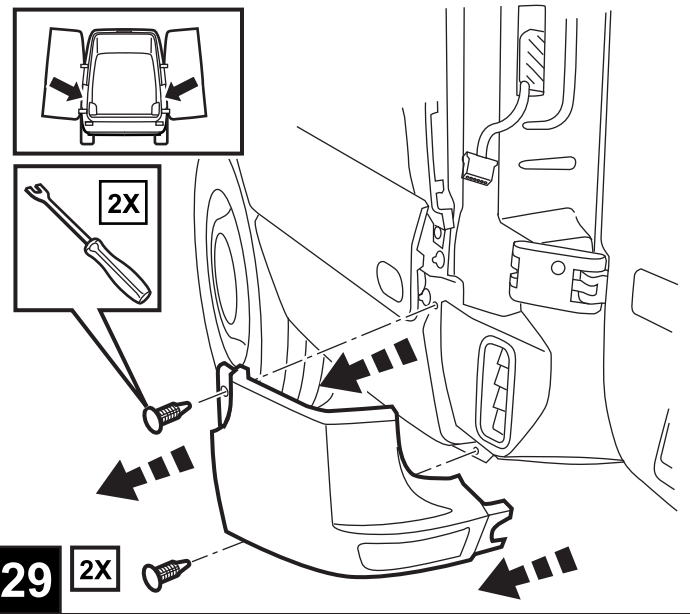


29 2X

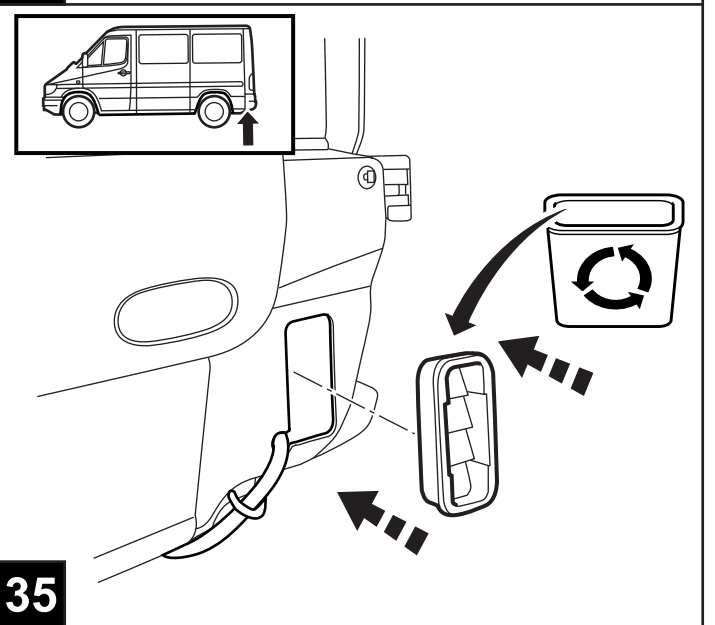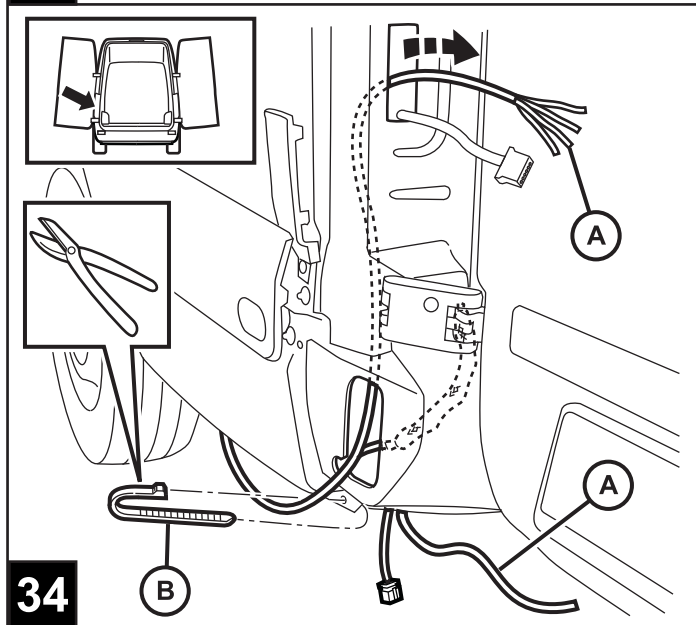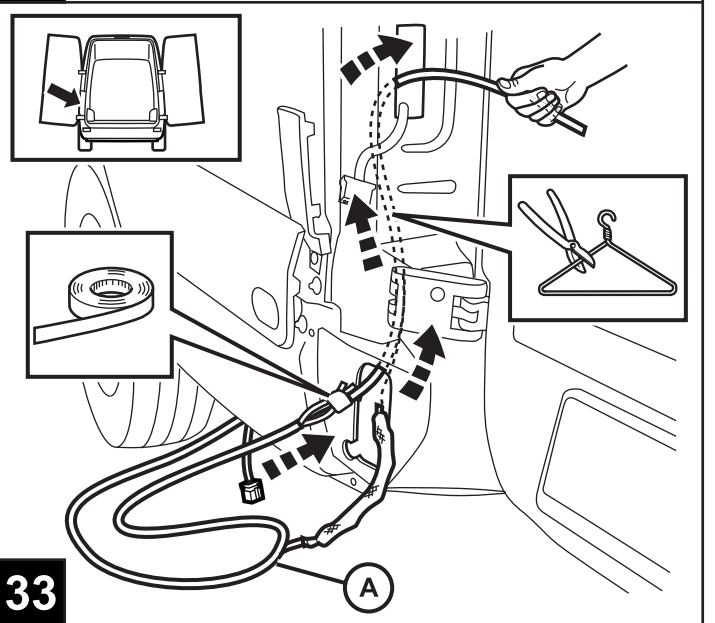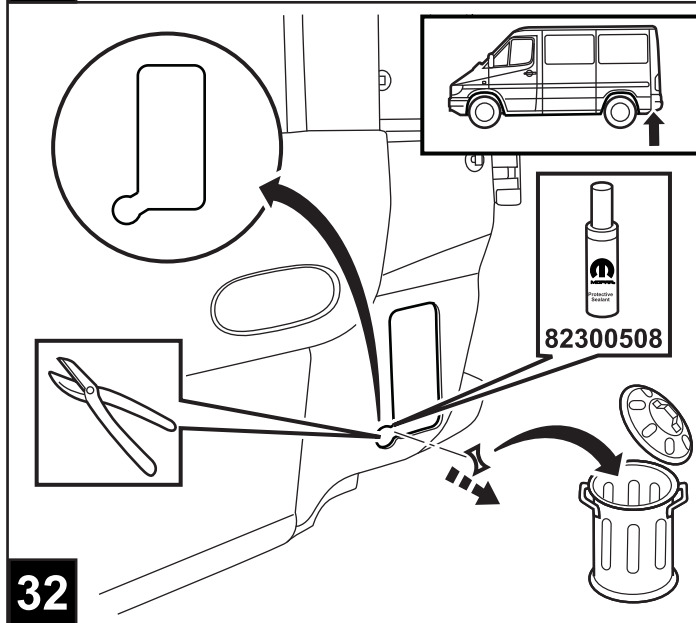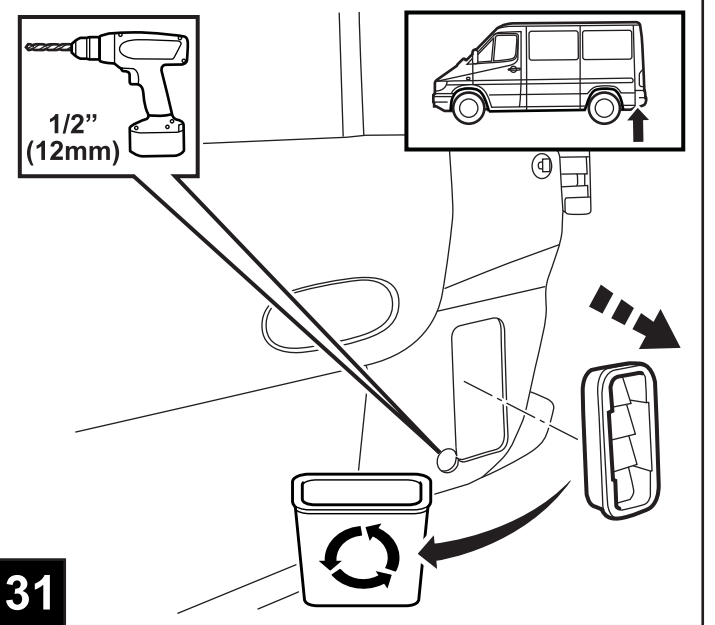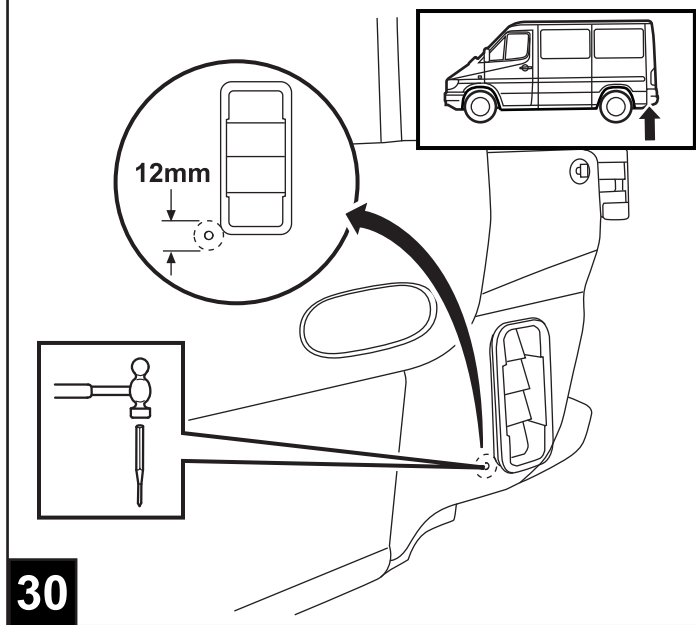


STANDARD VAN

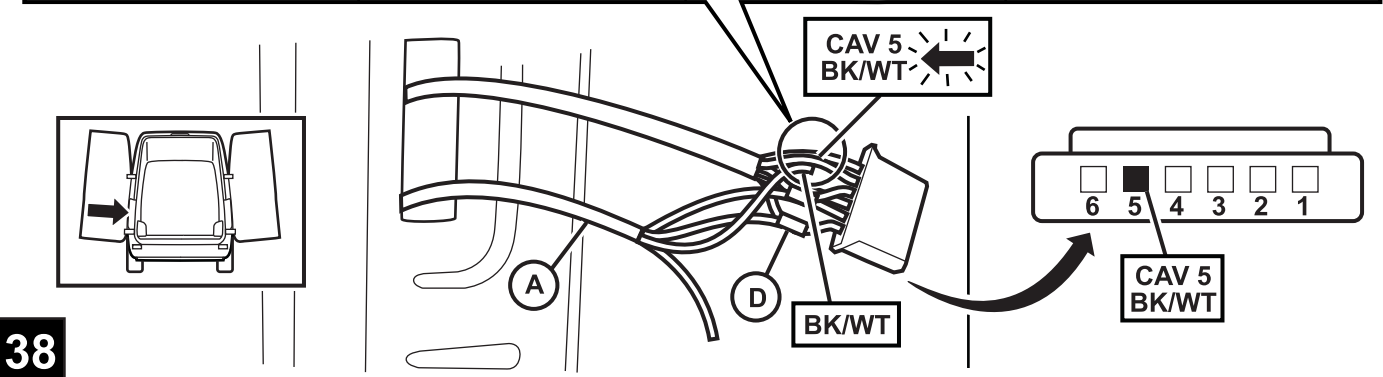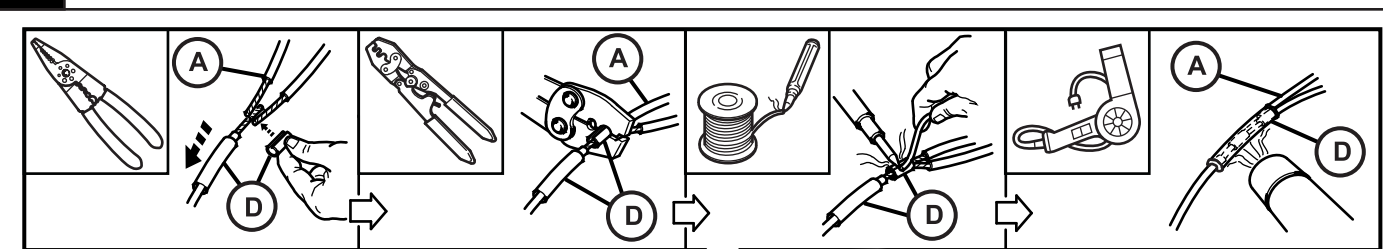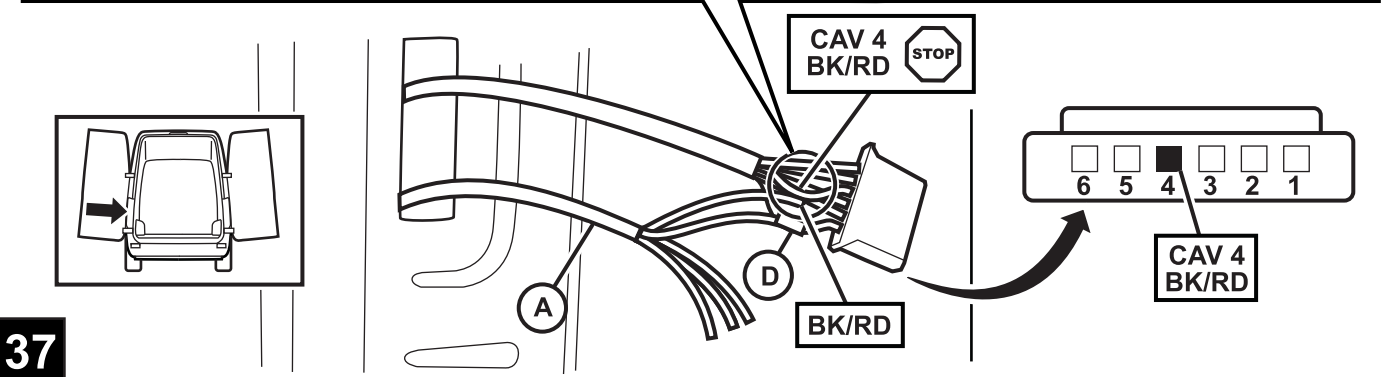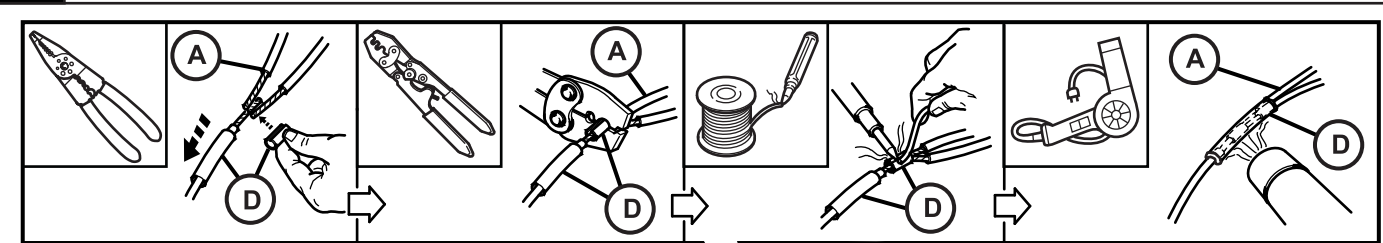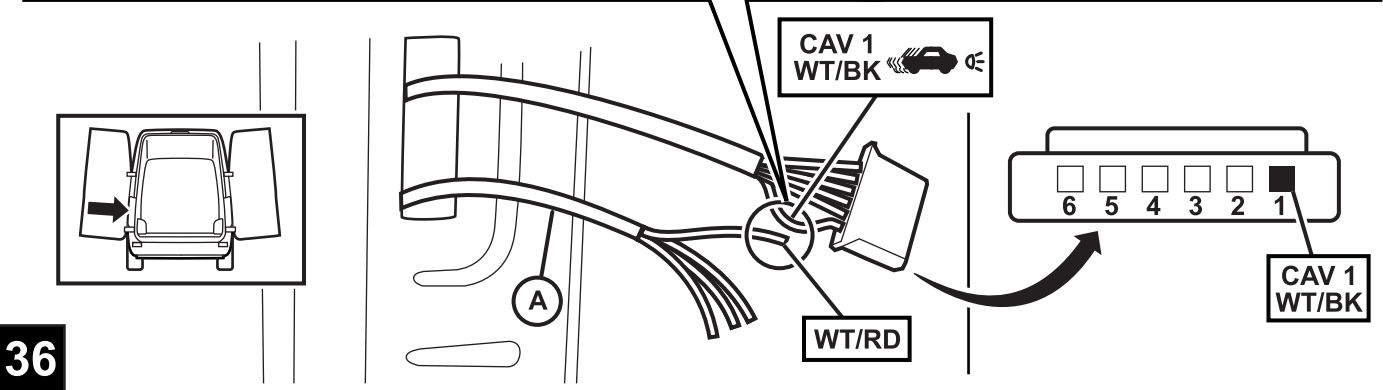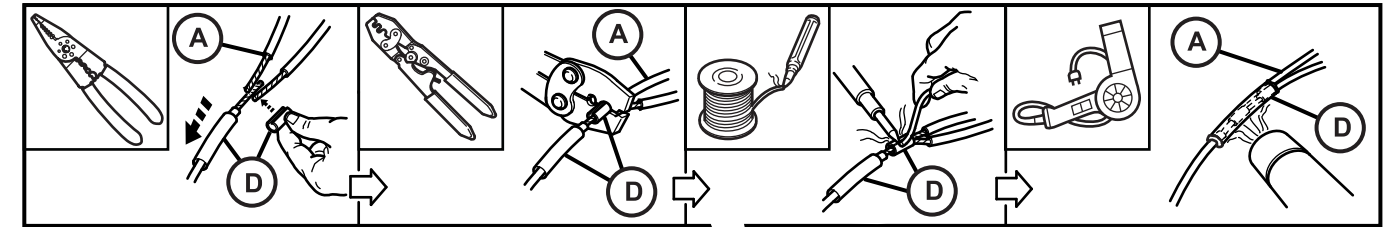


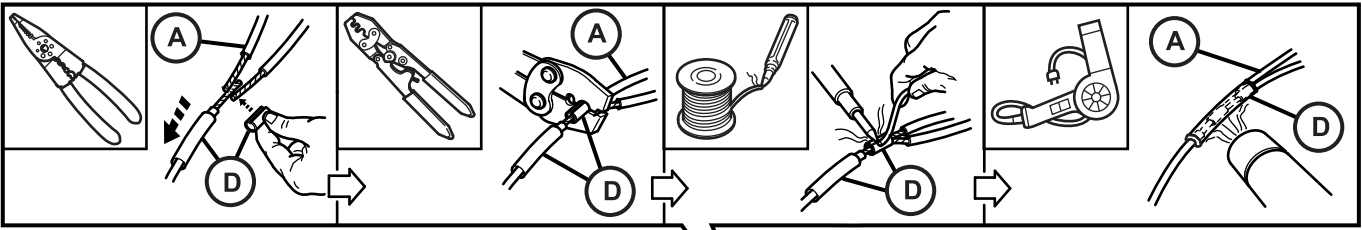


39

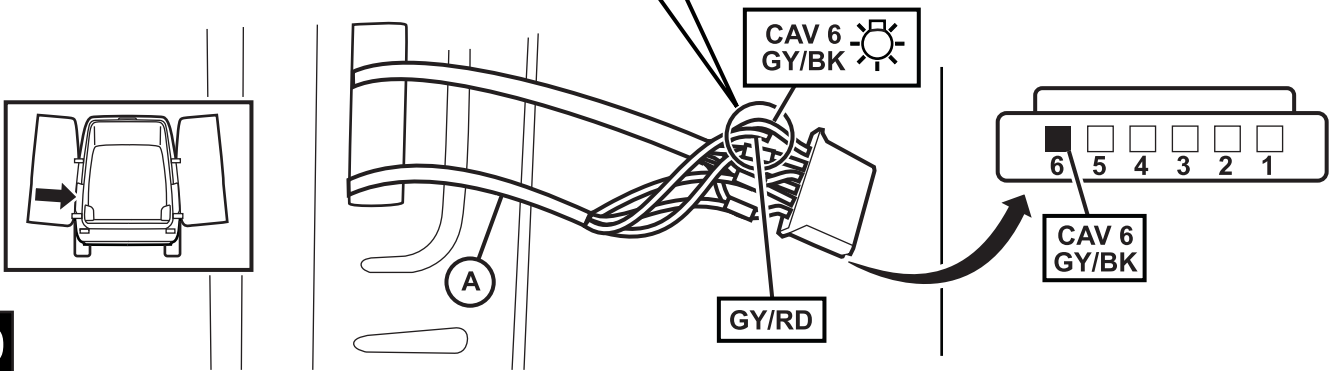


40

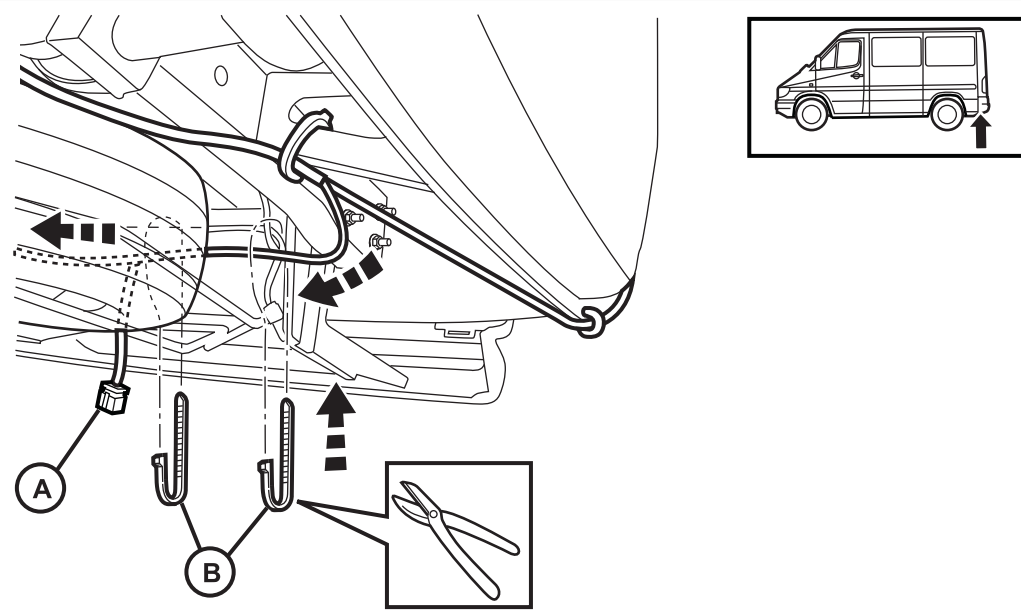


41

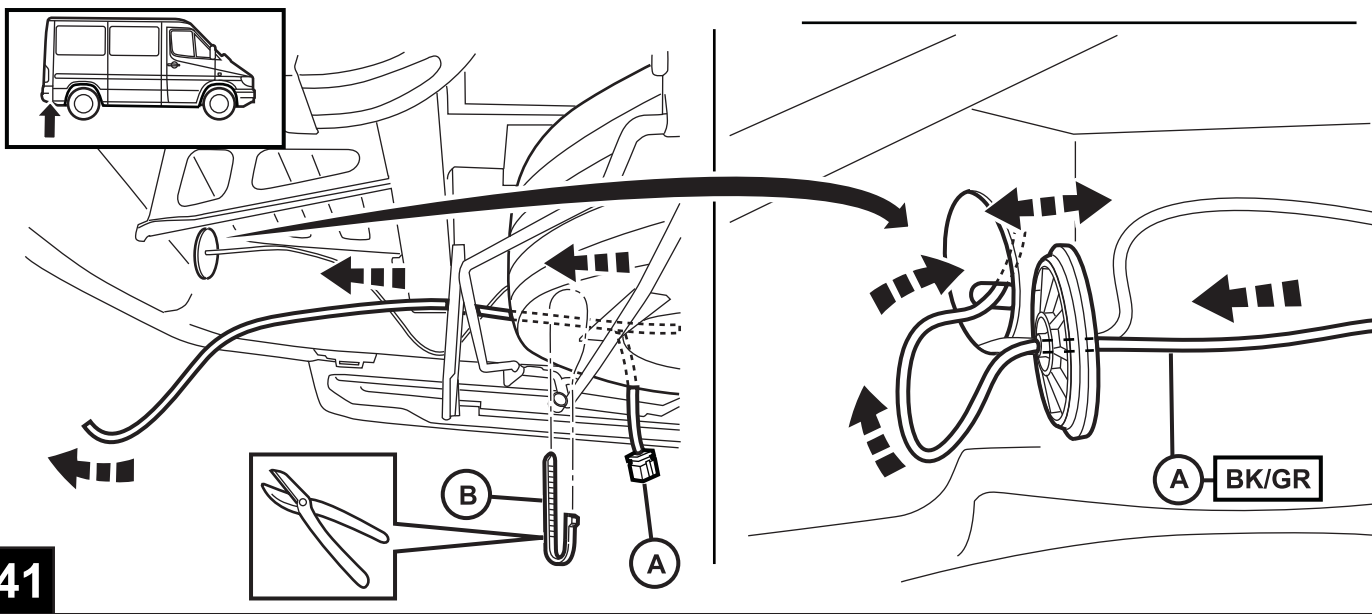


STANDARD VAN

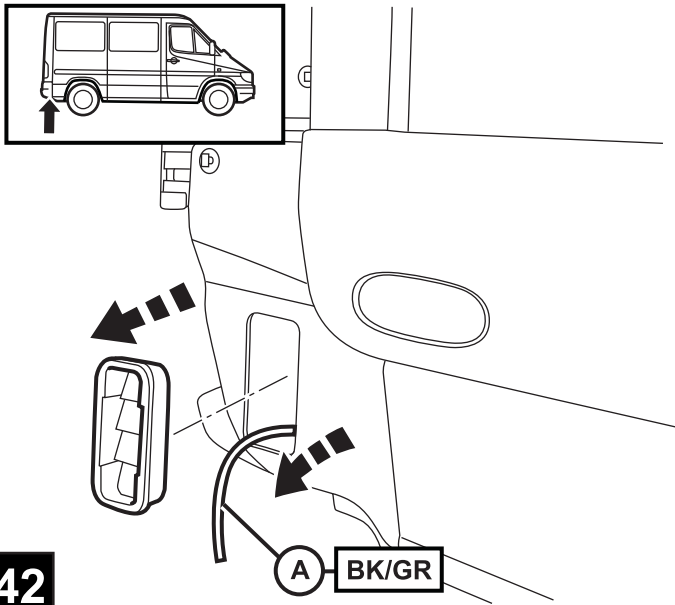


42

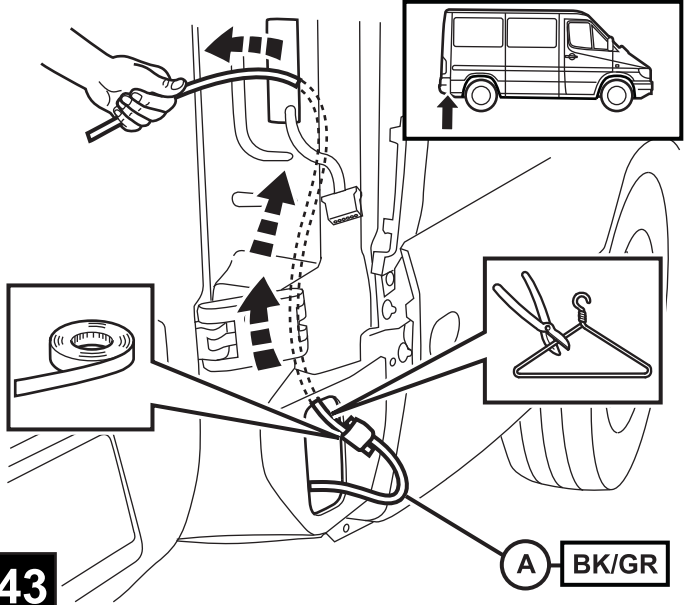


43

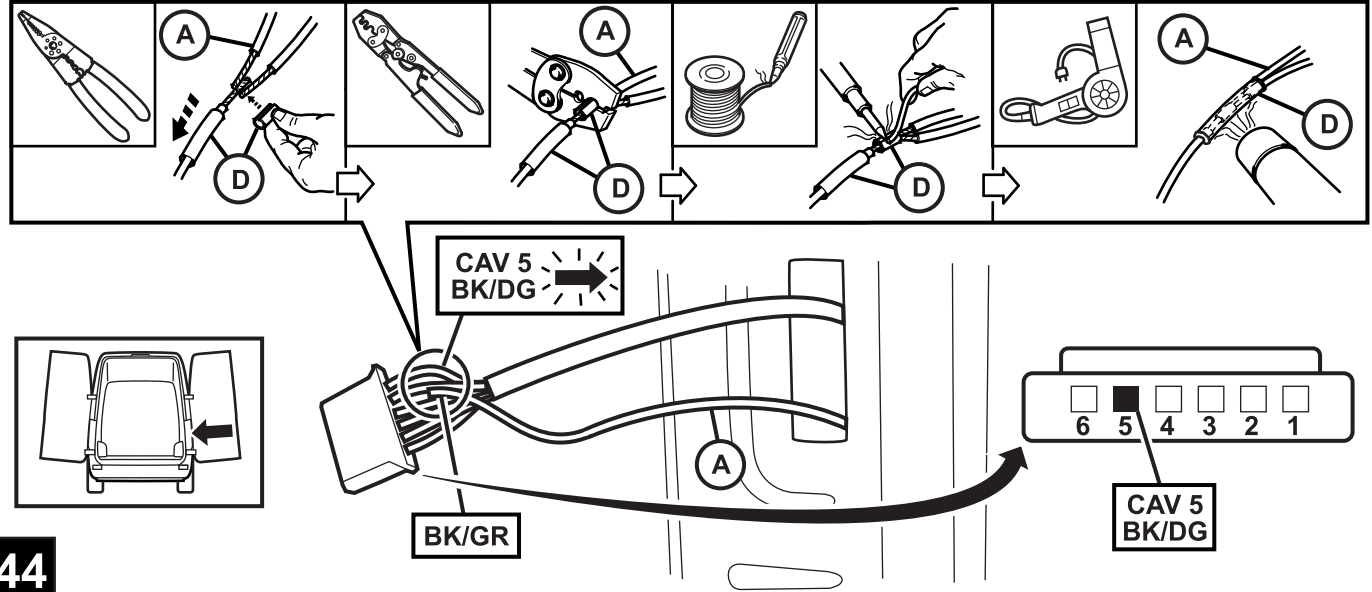

44






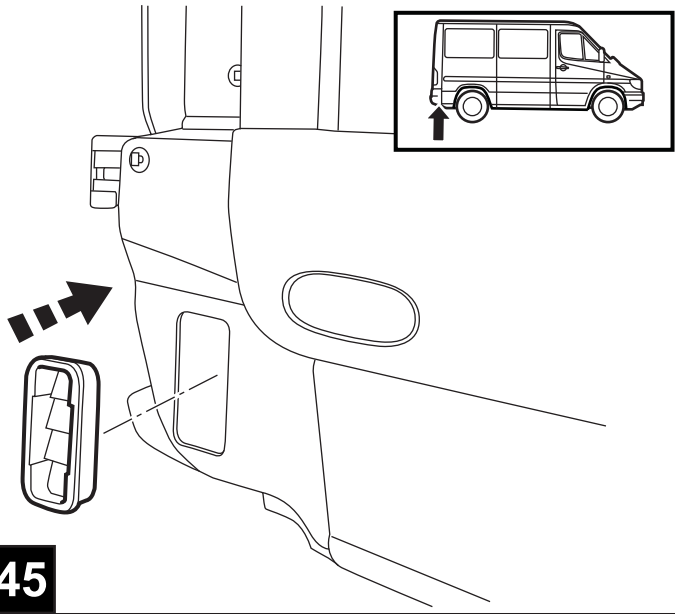


45






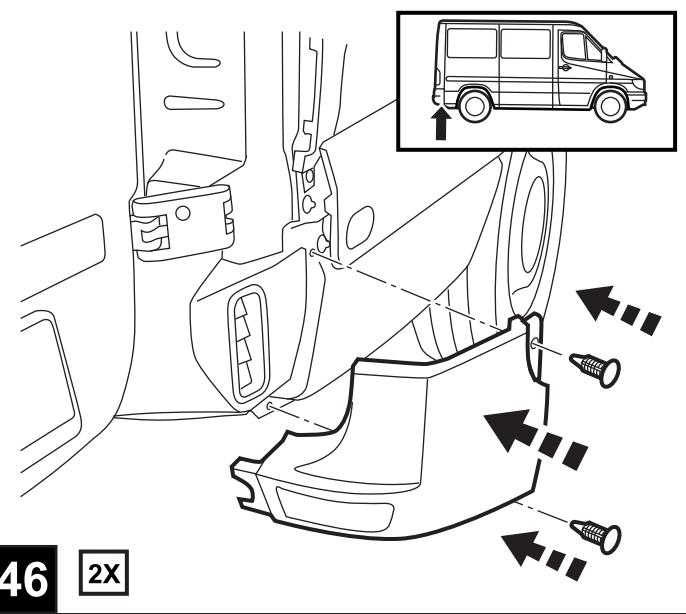








46

2X

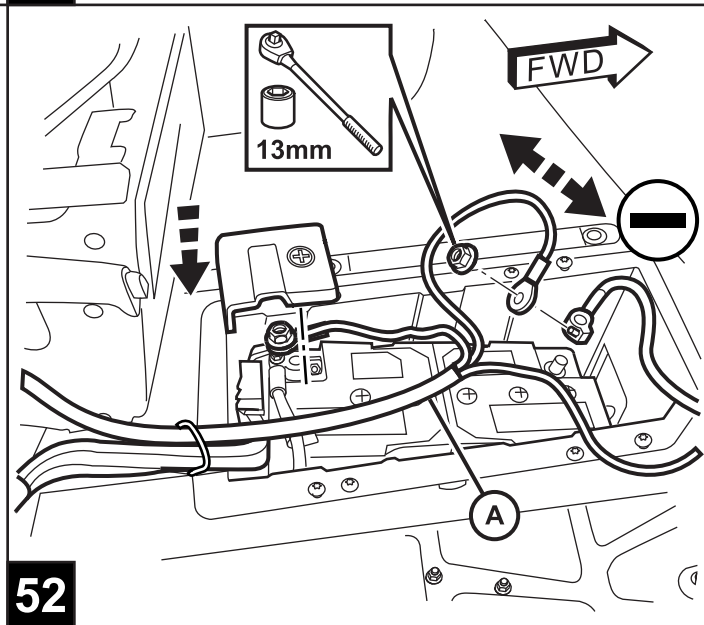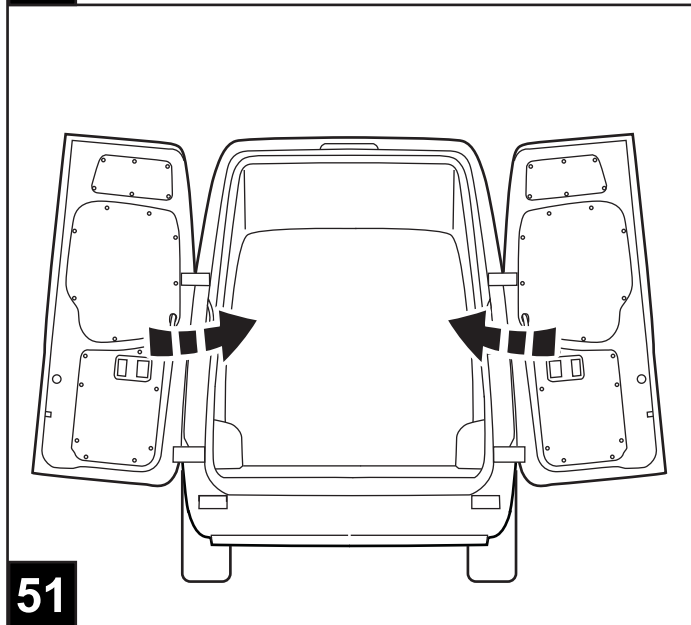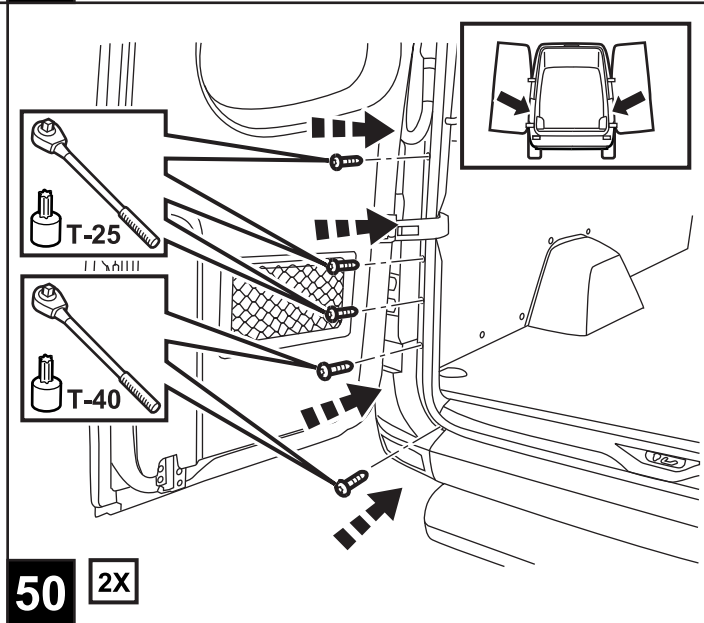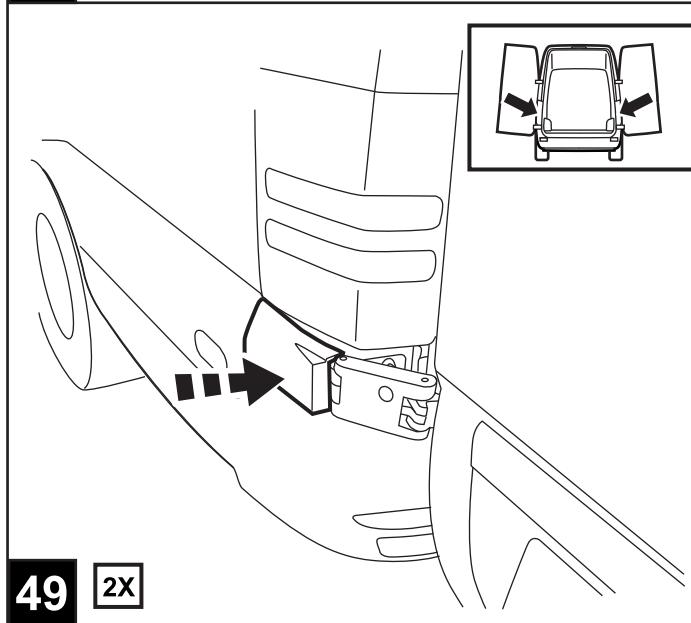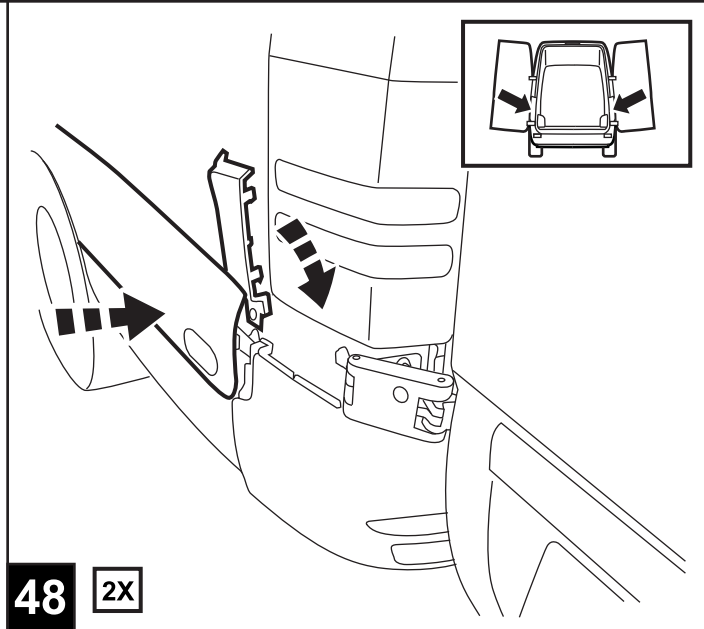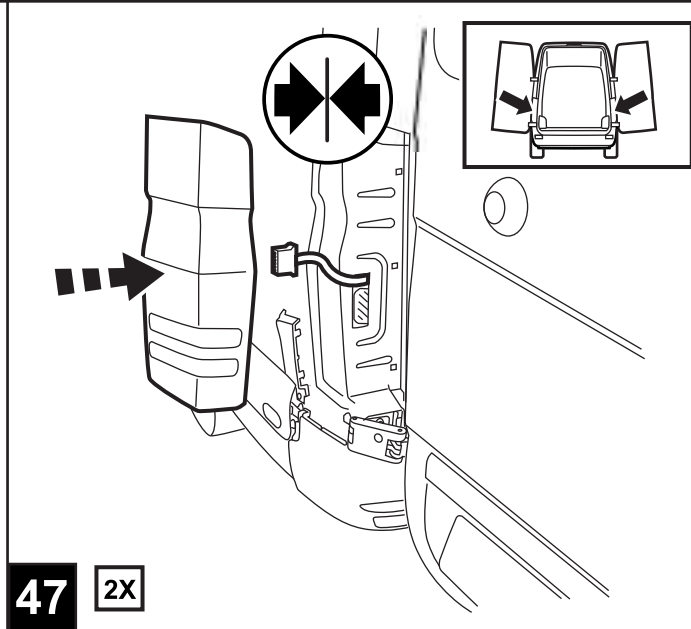


STANDARD VAN

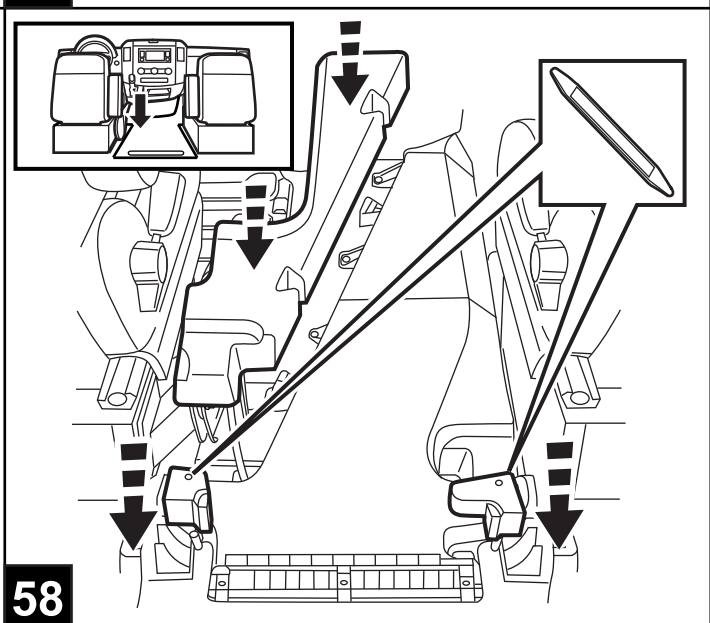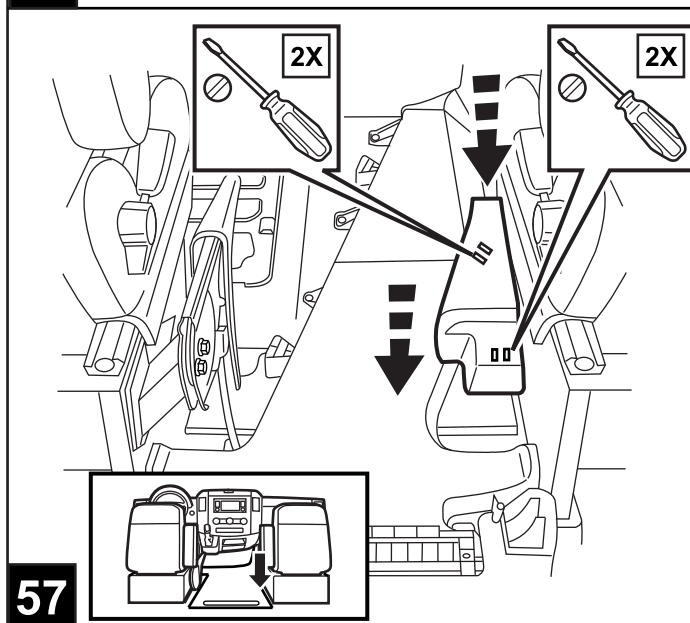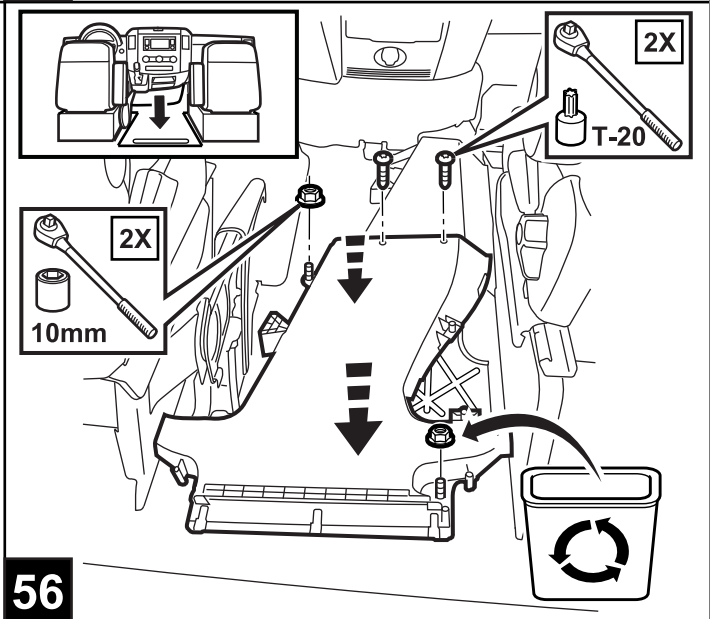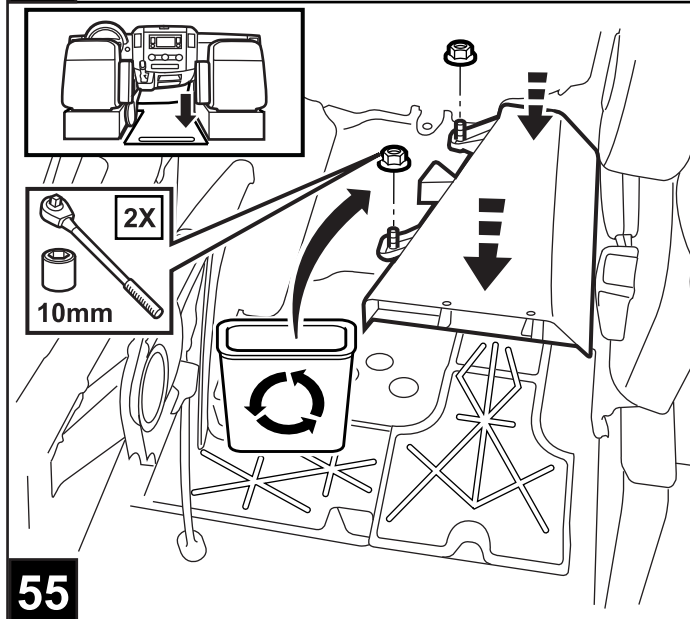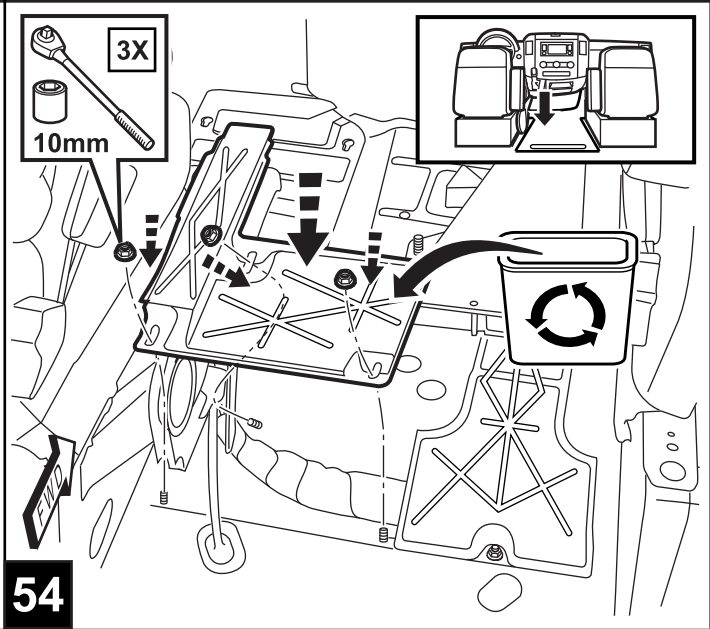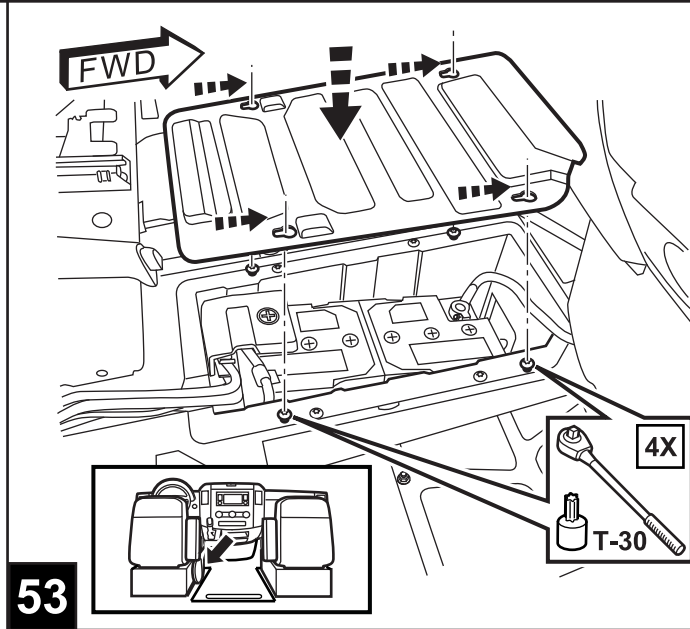


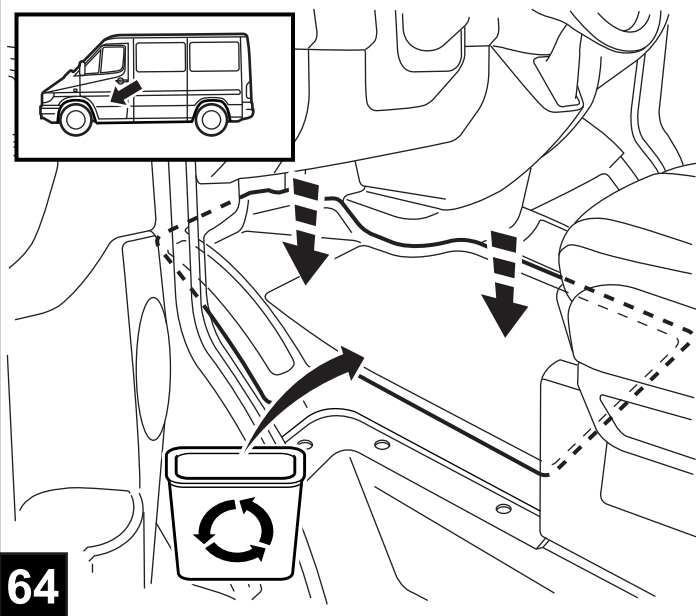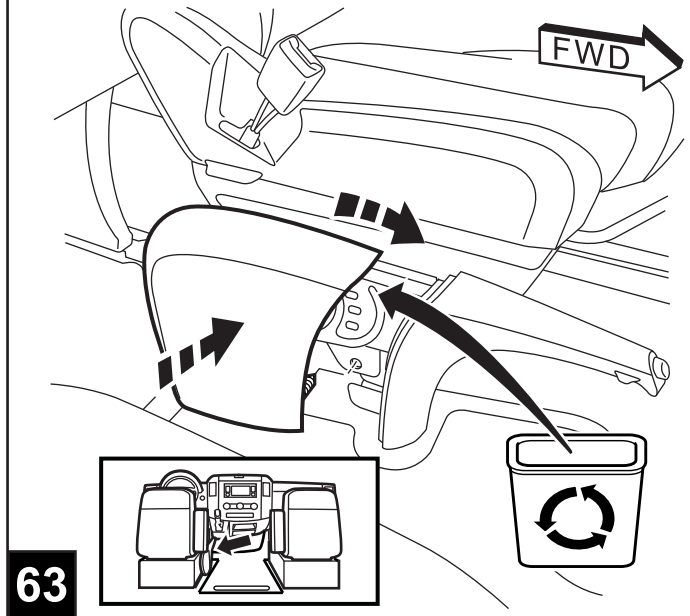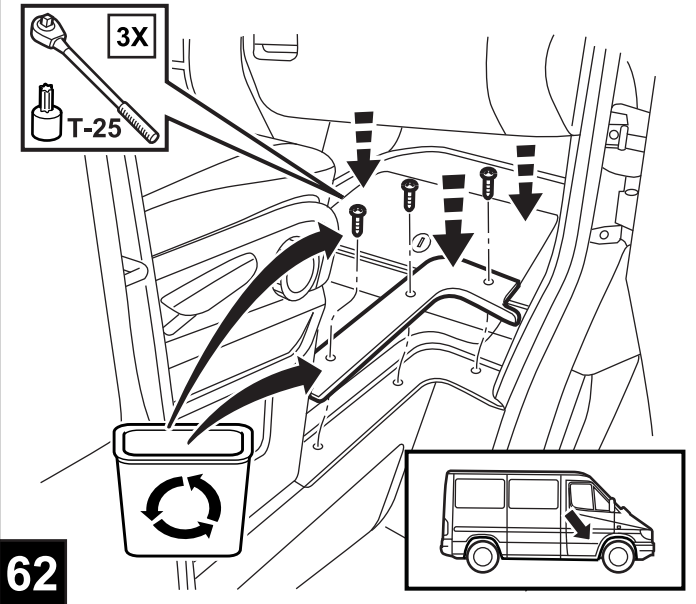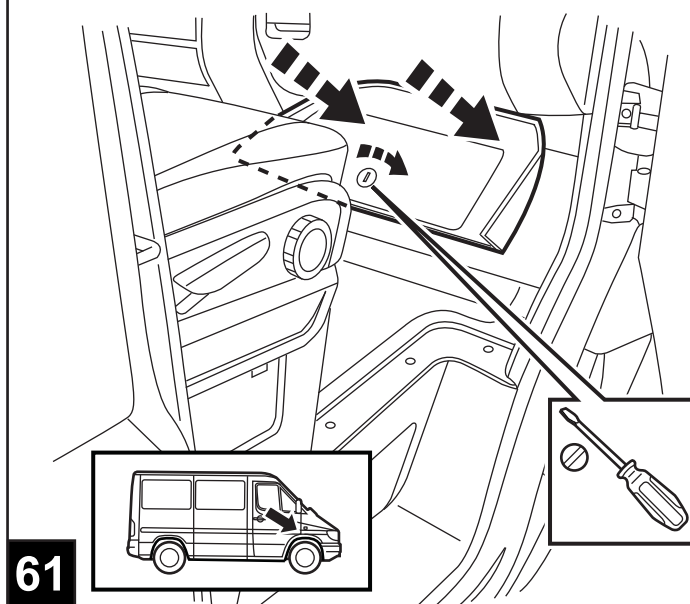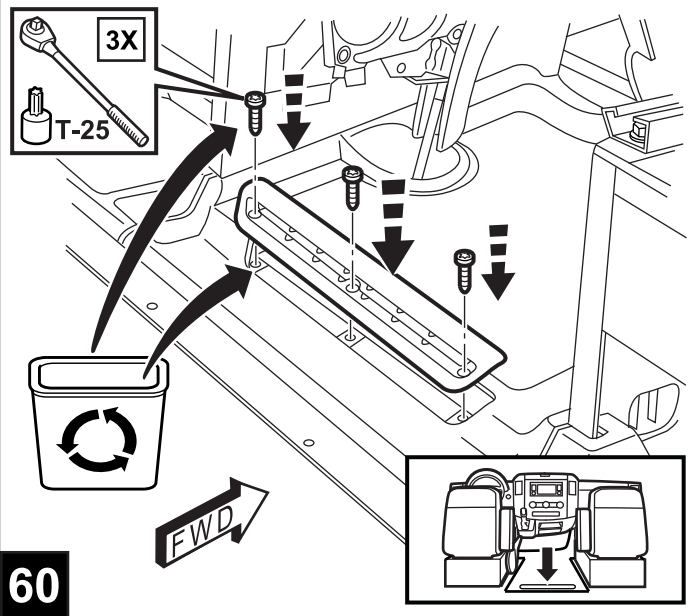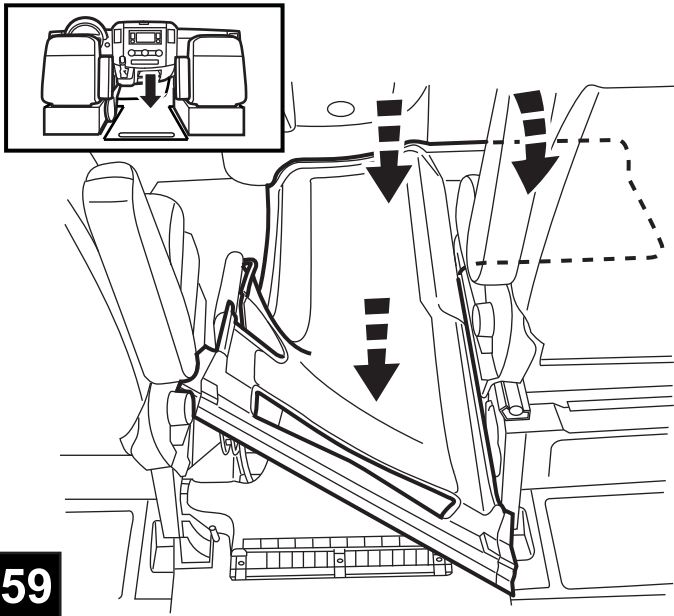

STANDARD VAN





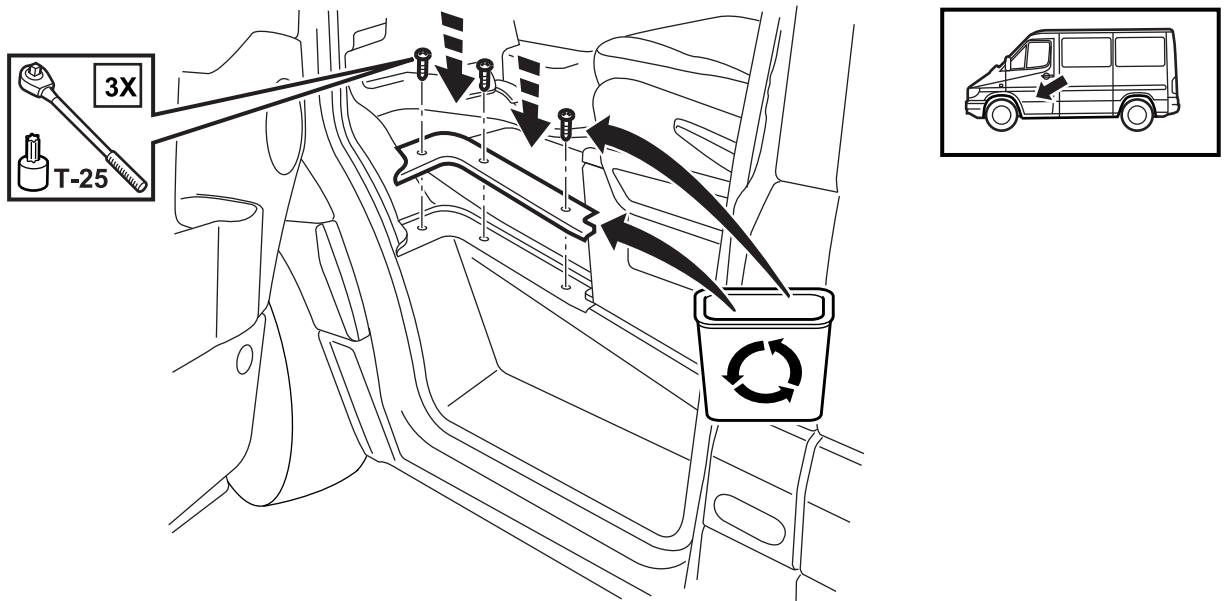


65

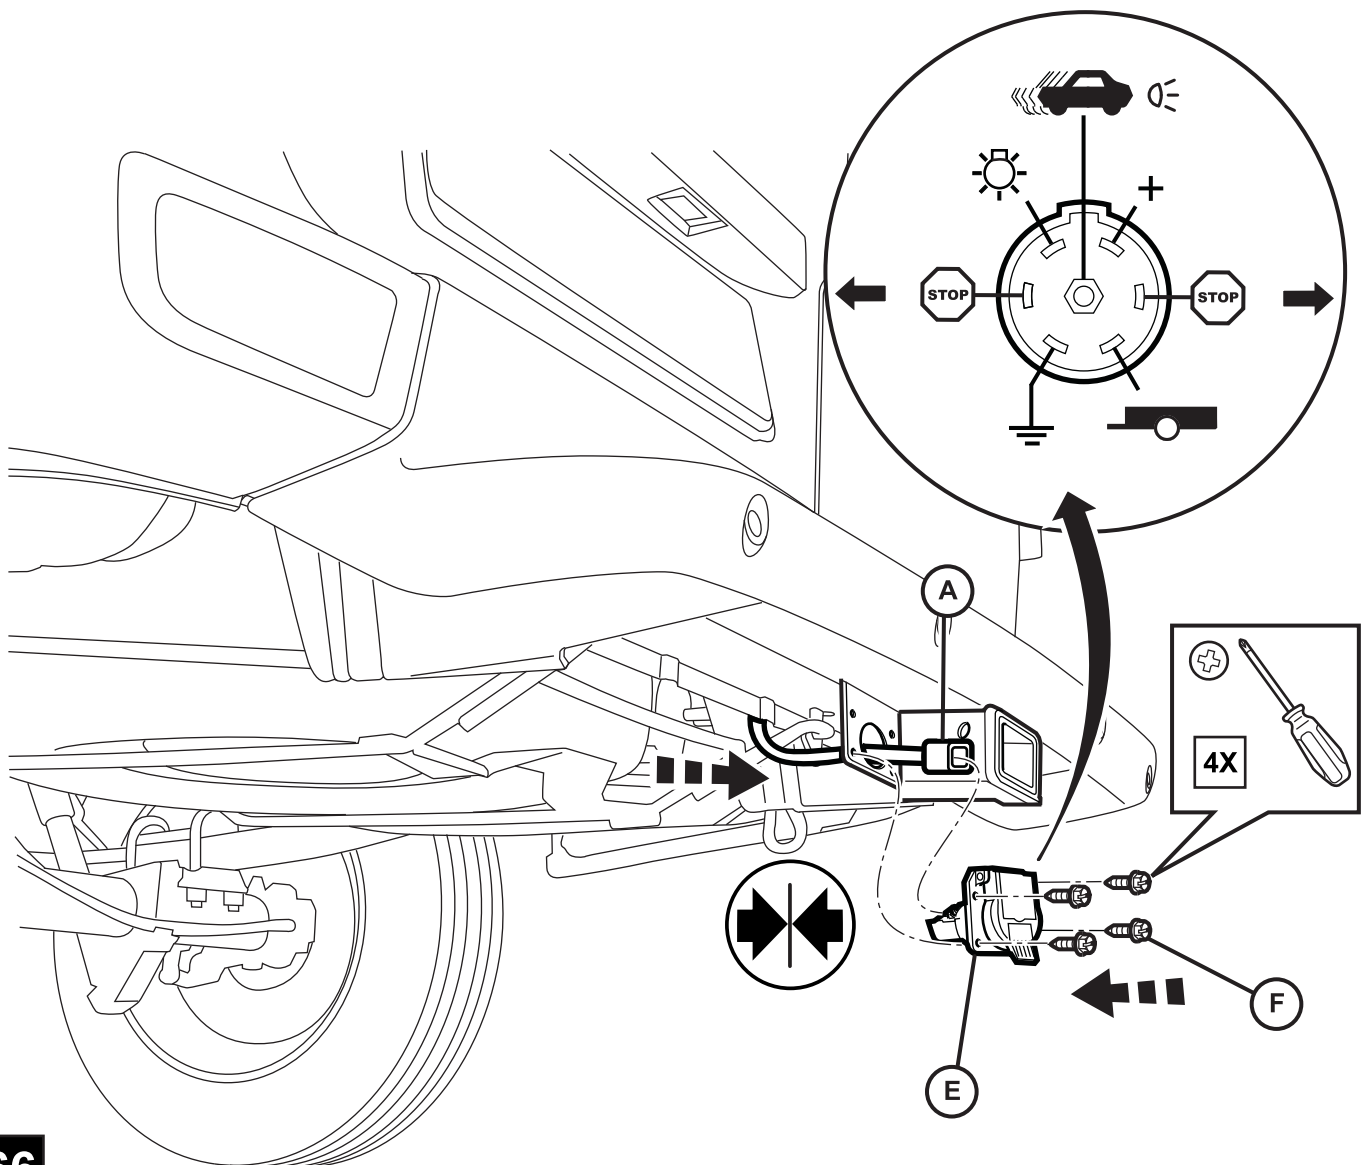

66

170 EXTENDED VAN

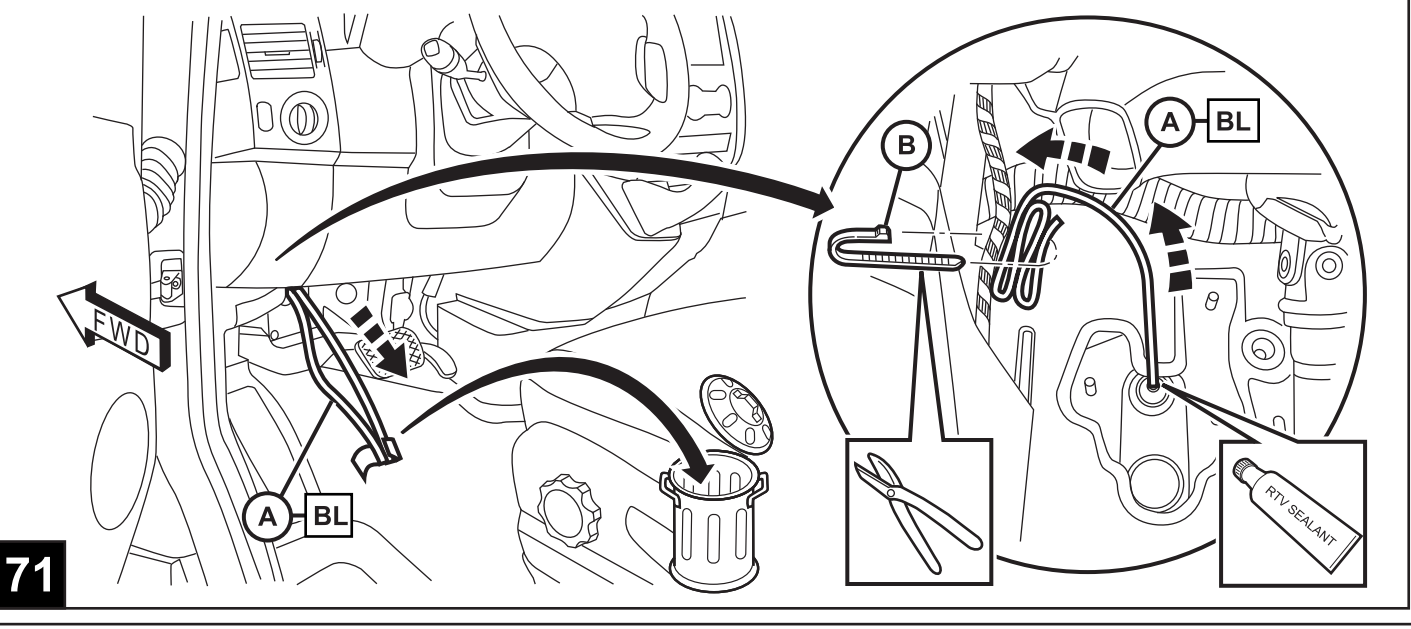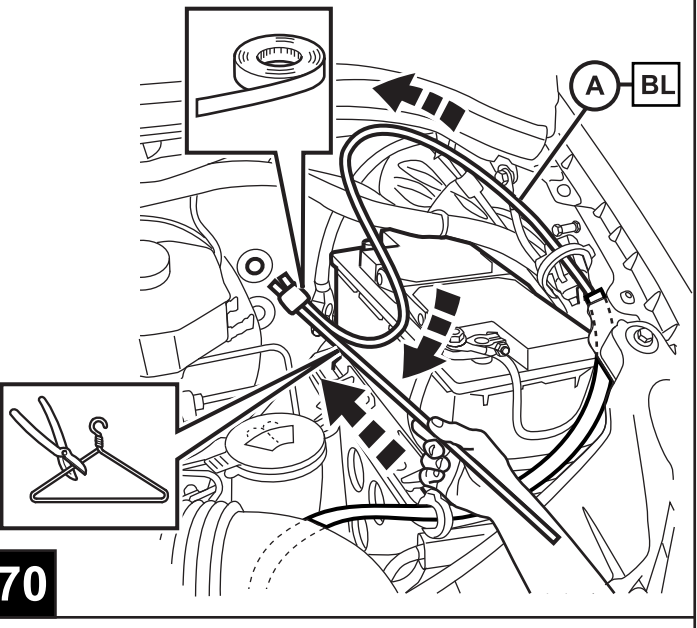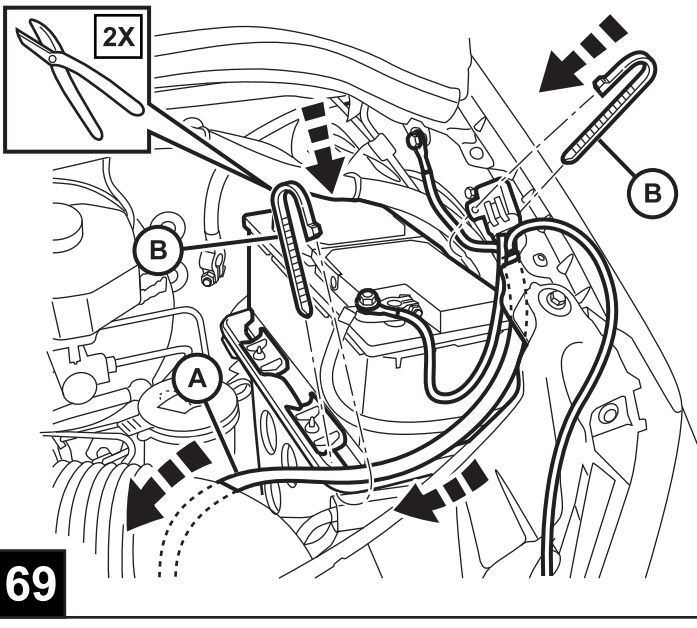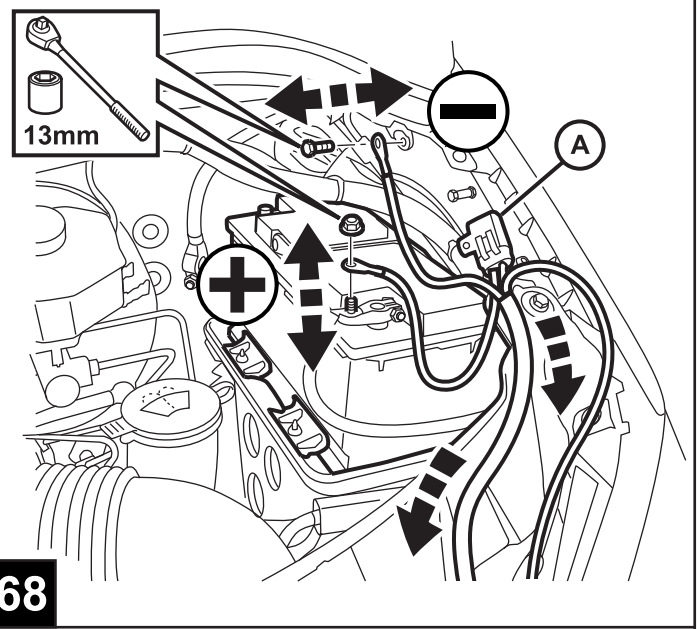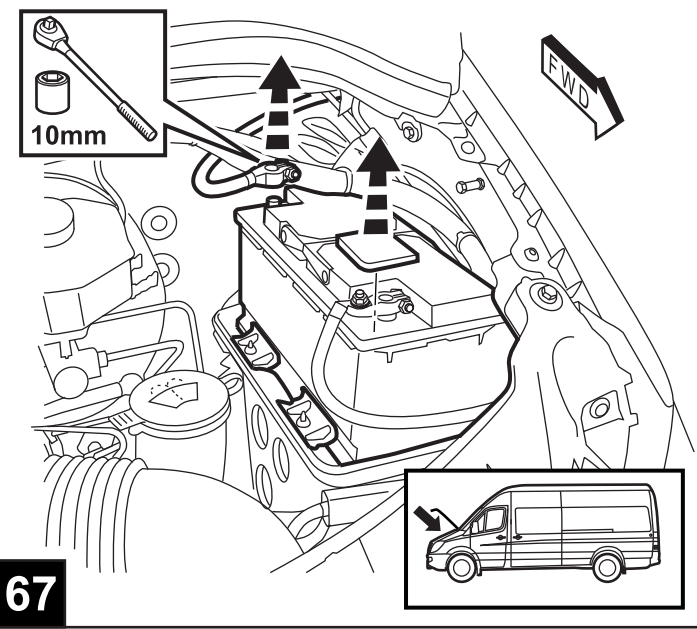

⚠ CAUTION ⚠

WHEN ROUTING TOW HARNESS THROUGH ENGINE COMPARTMENT, HARNESS MUST BE MOUNTED AWAY FROM EXHAUST MANIFOLD HEAT SHIELD AND EXHAUST PIPE.



⚠ PRECAUCIÓN ⚠

Cuando encauce el arnés para remolque por el compartimiento del motor, el arnés deberá estar montado a distancia del múltiple de escape, del protector contra calor y del tubo de escape.


⚠ MISE EN GARDE ⚠

Lors de l'acheminement du faisceau de remorquage par le compartiment-moteur, le faisceau doit être positionné à l'écart du protecteur thermique du collecteur d'échappement et du tuyau d'échappement.


72

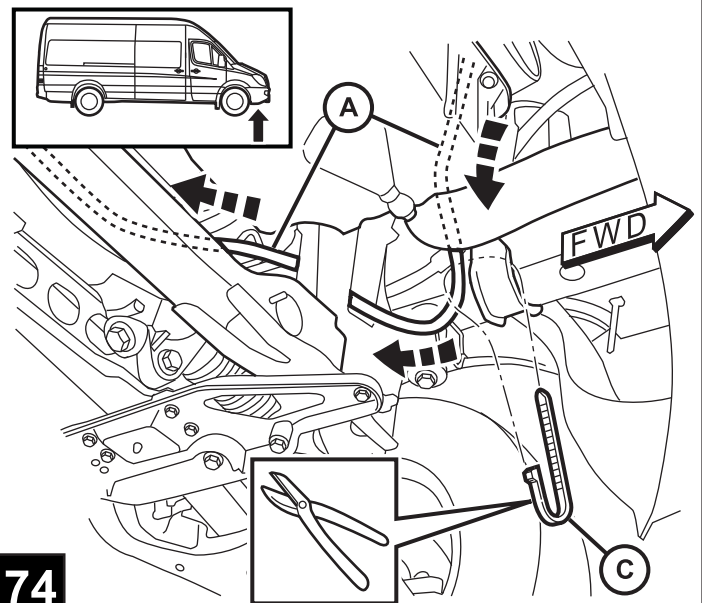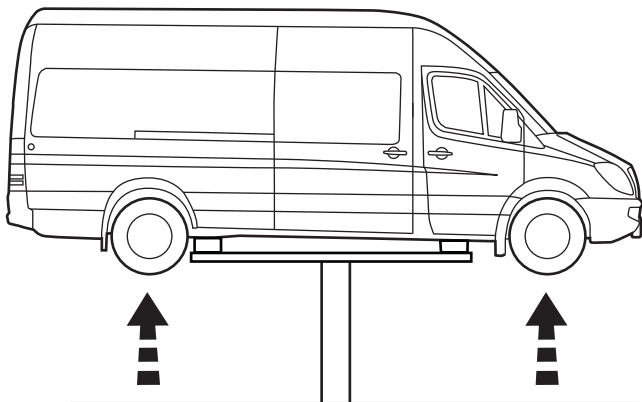

73

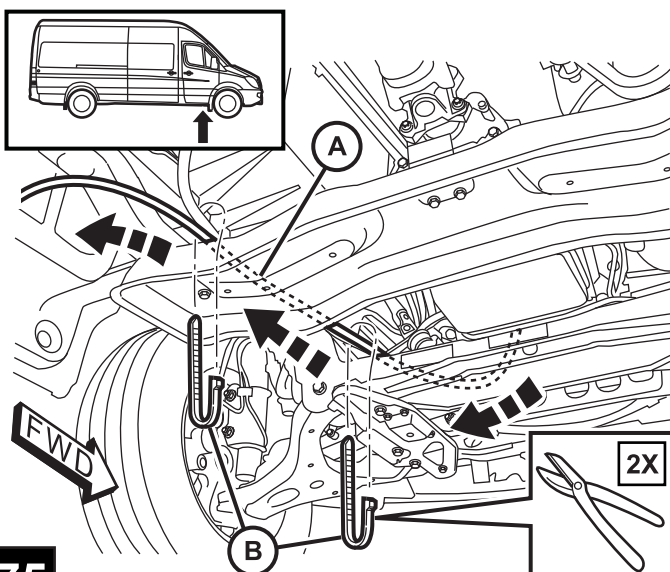



74

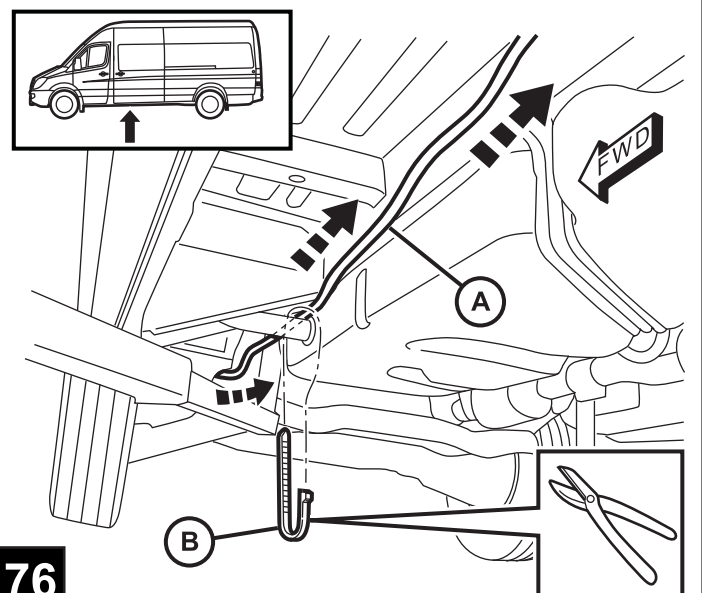



75

76



170 EXTENDED VAN

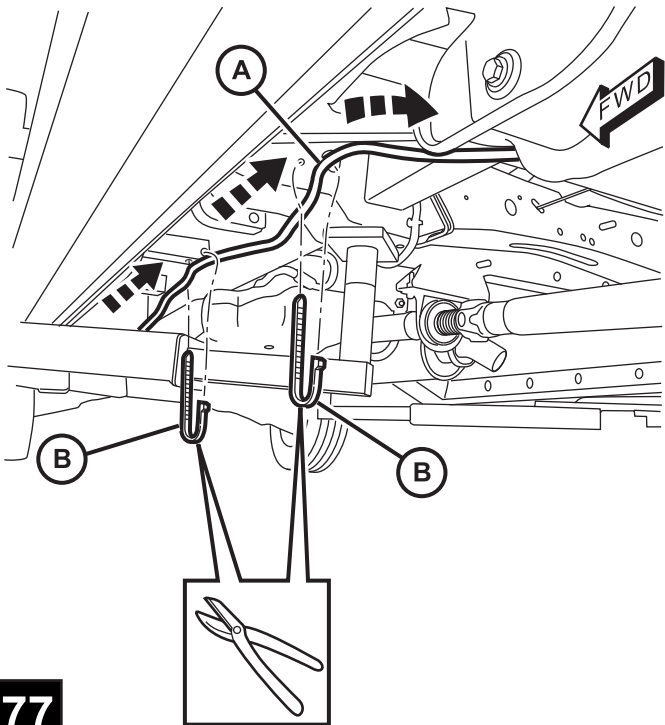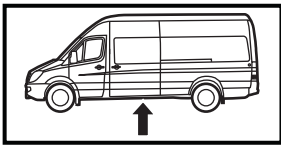


77

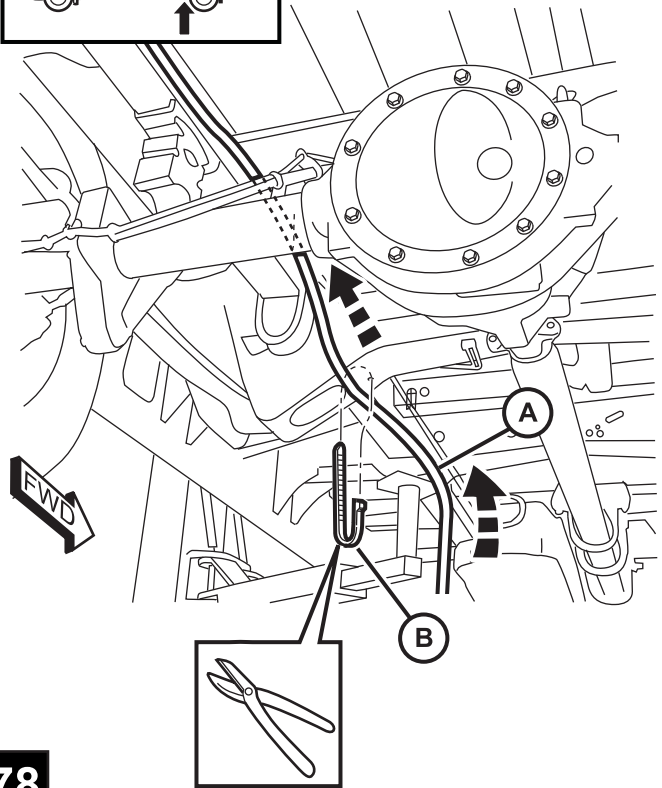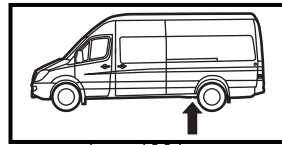


78

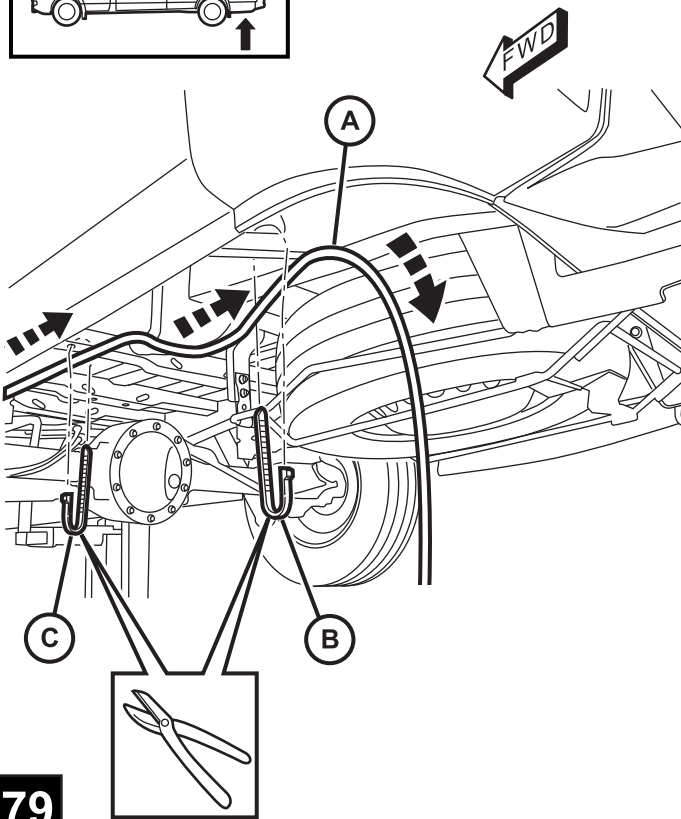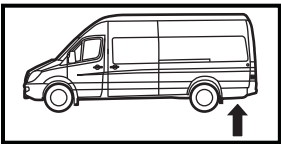


79

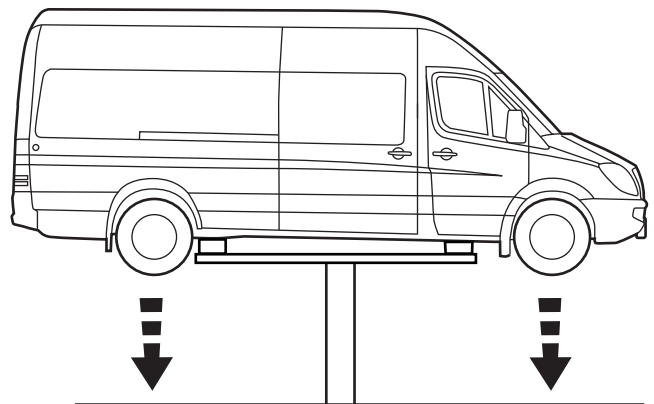


80

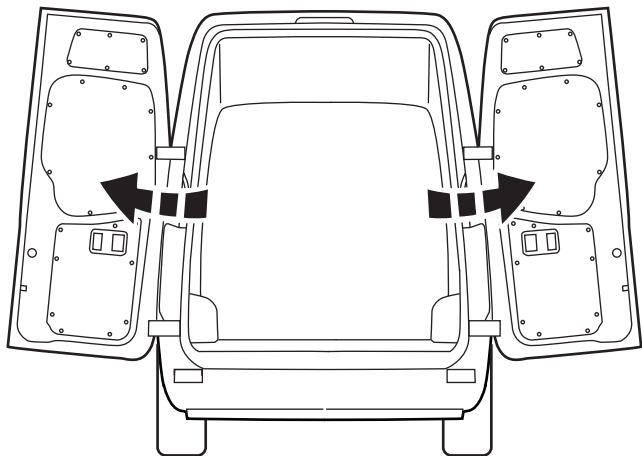


81

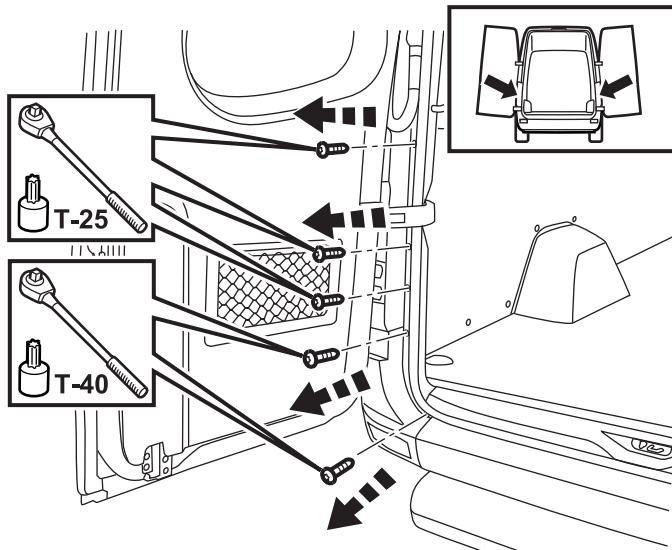


82 2X

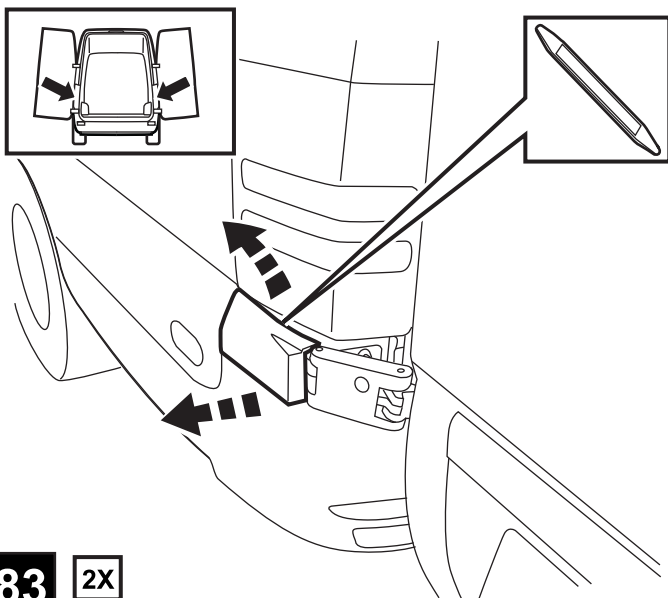


83 2X

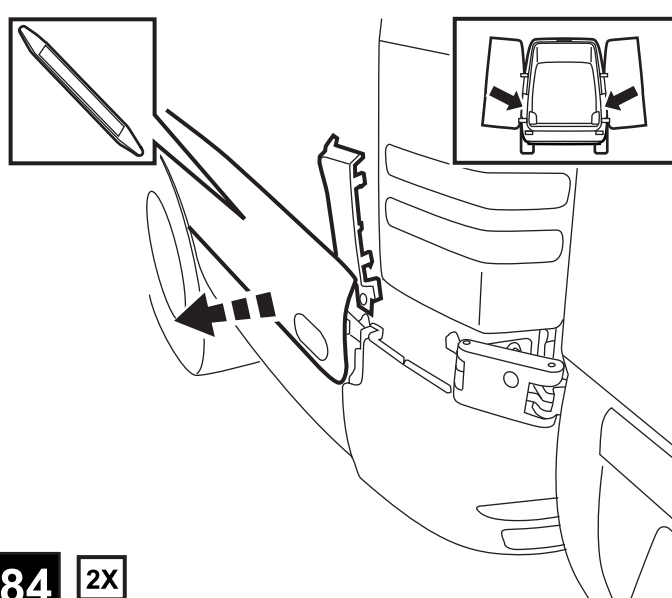

84 2X






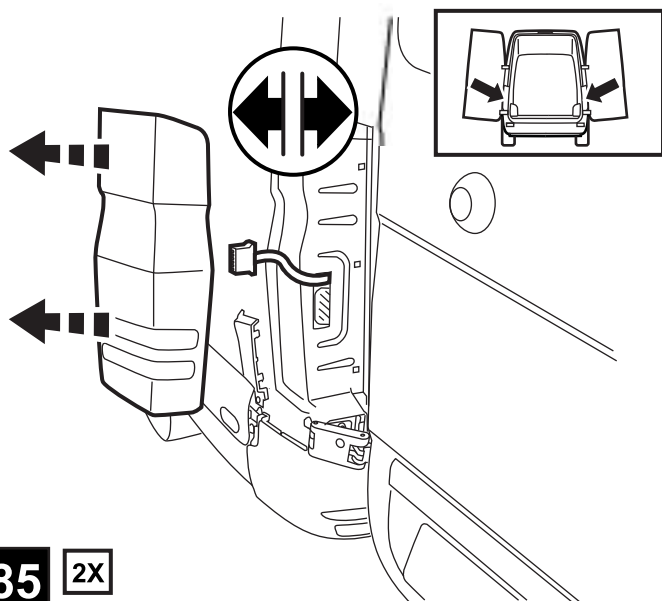


85 2X

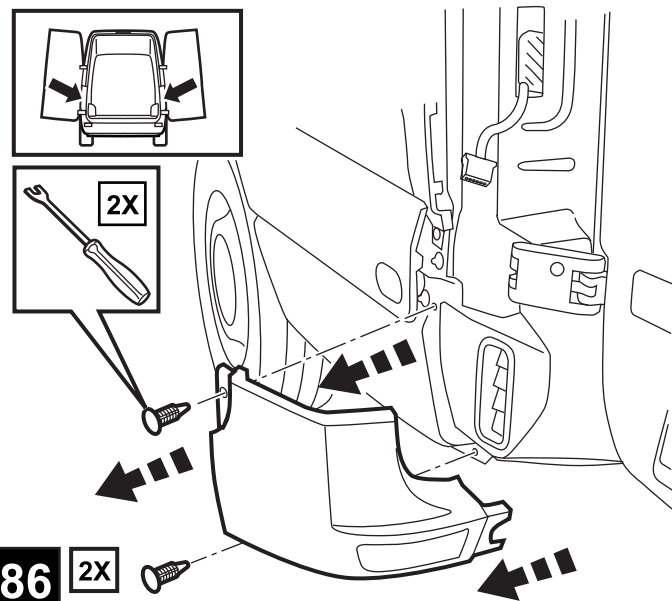


86 2X


170 EXTENDED VAN

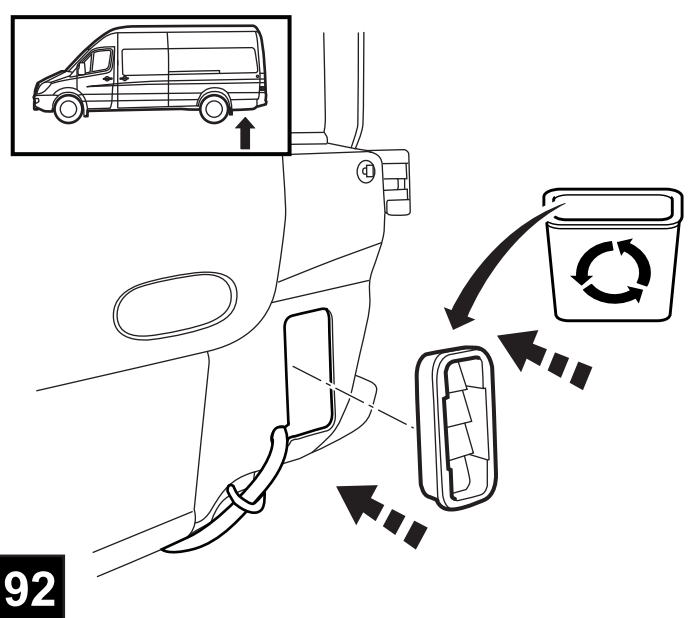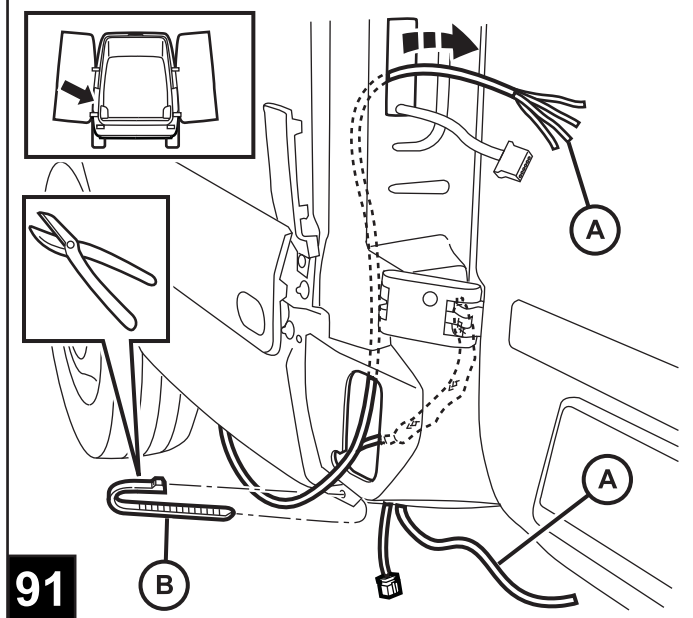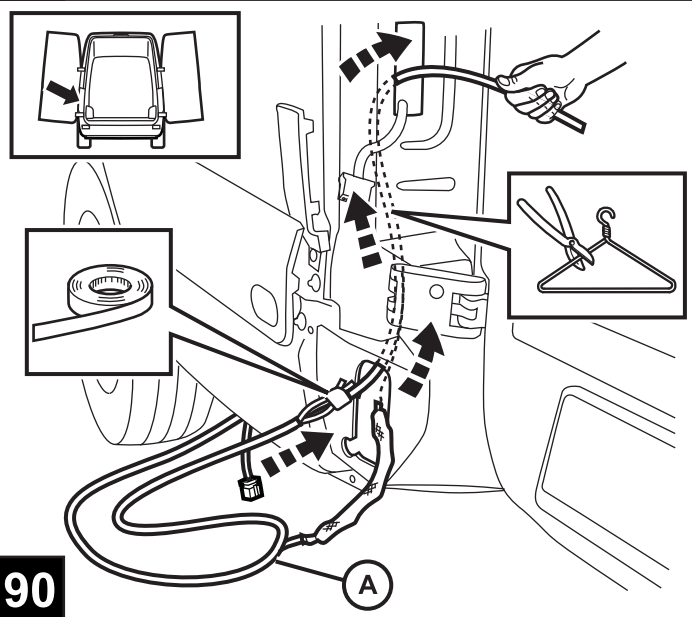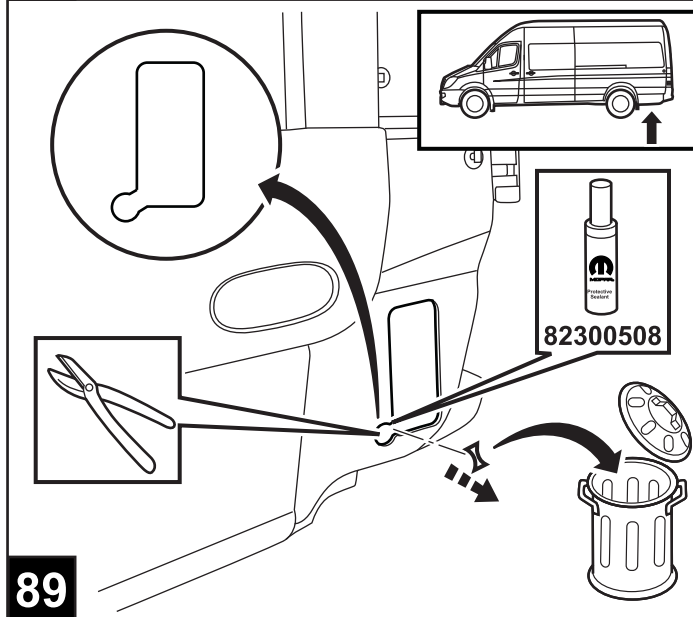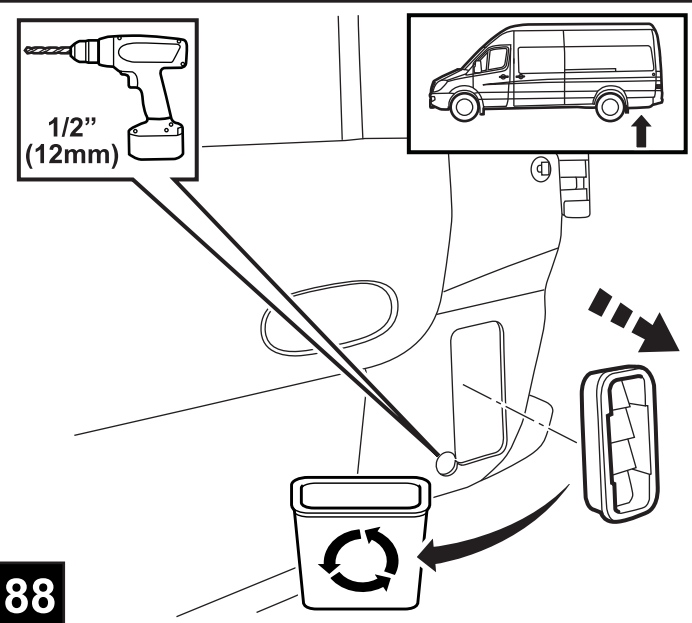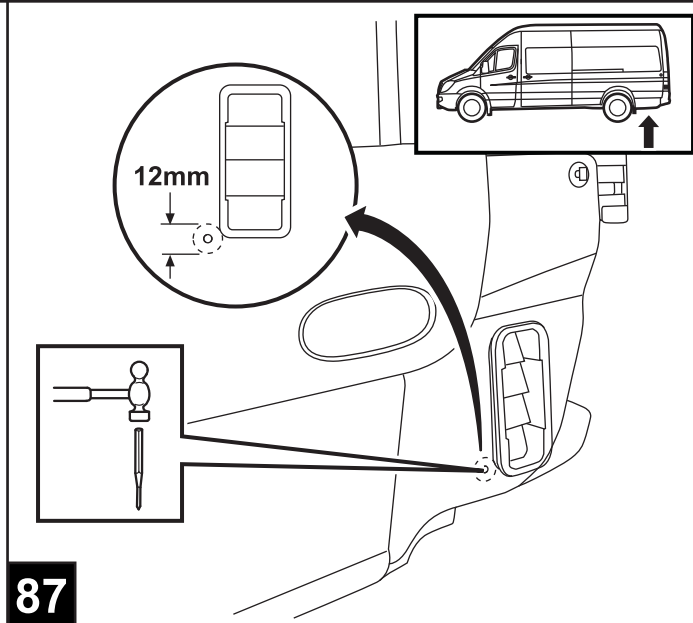


93

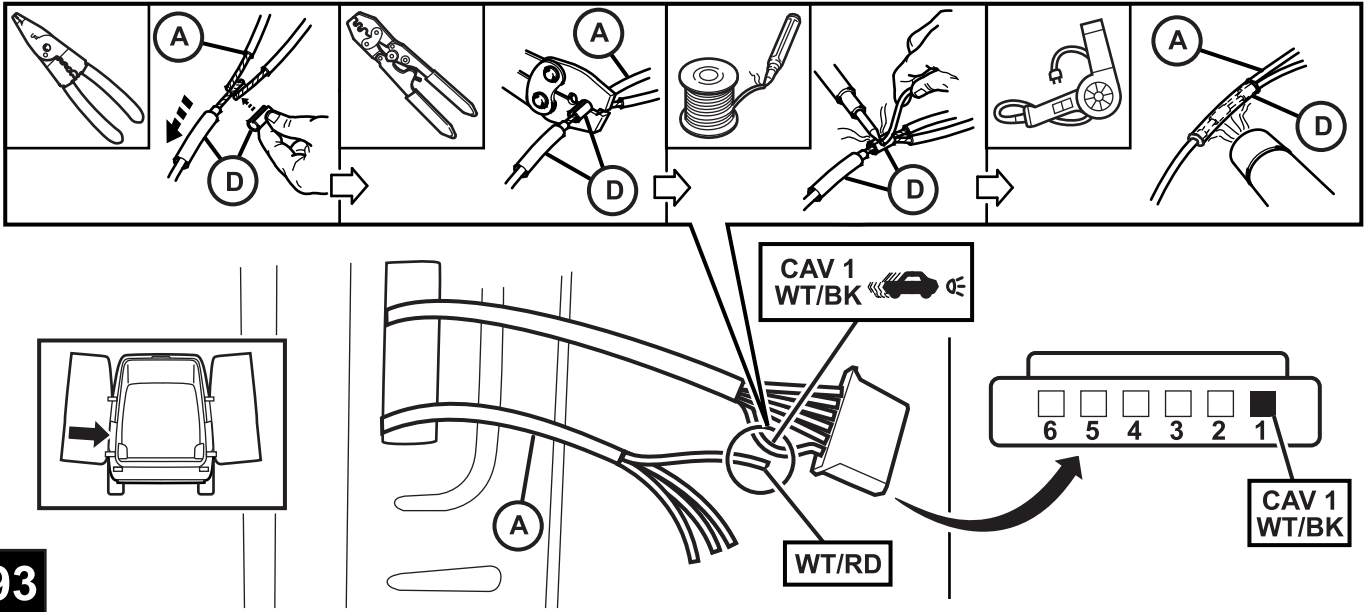


94

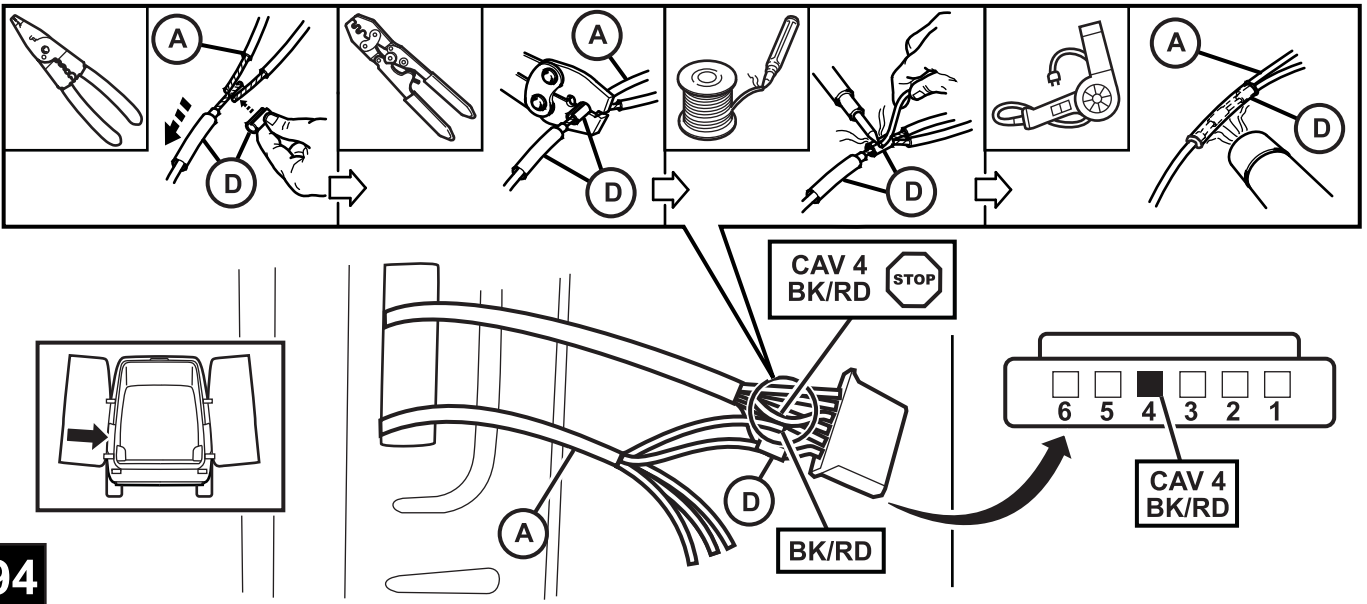


95

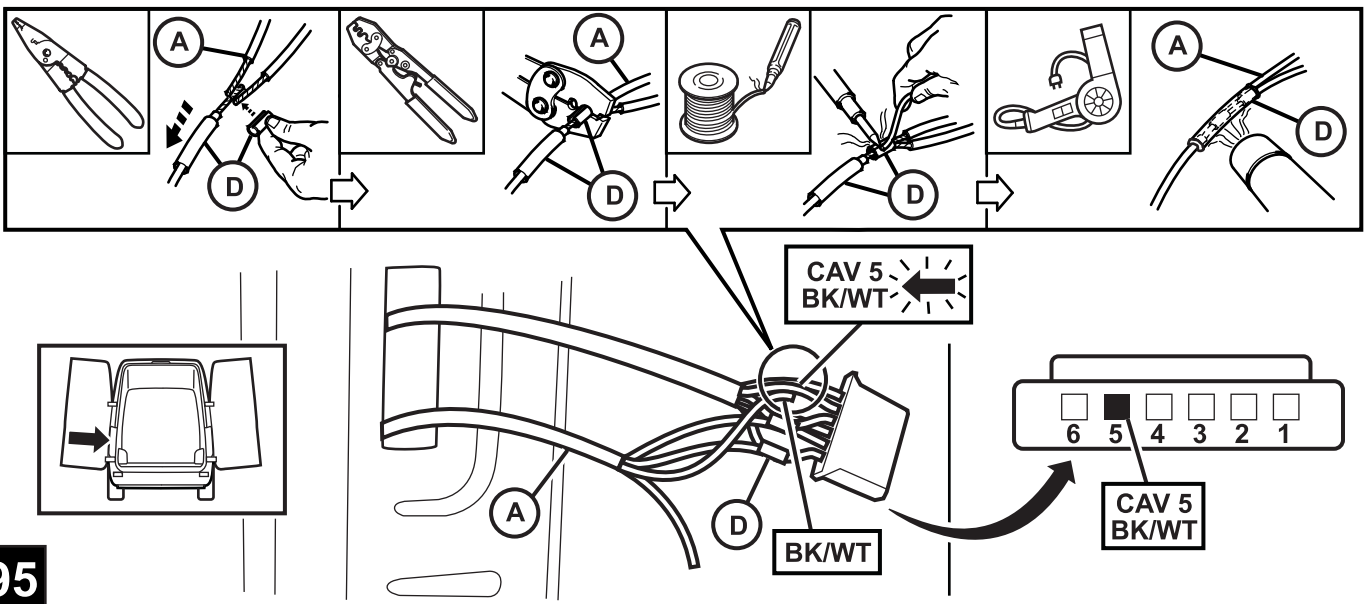


170 EXTENDED VAN

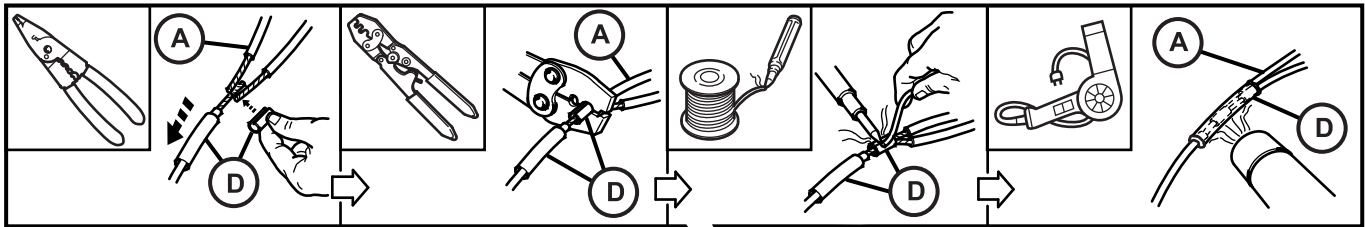


96

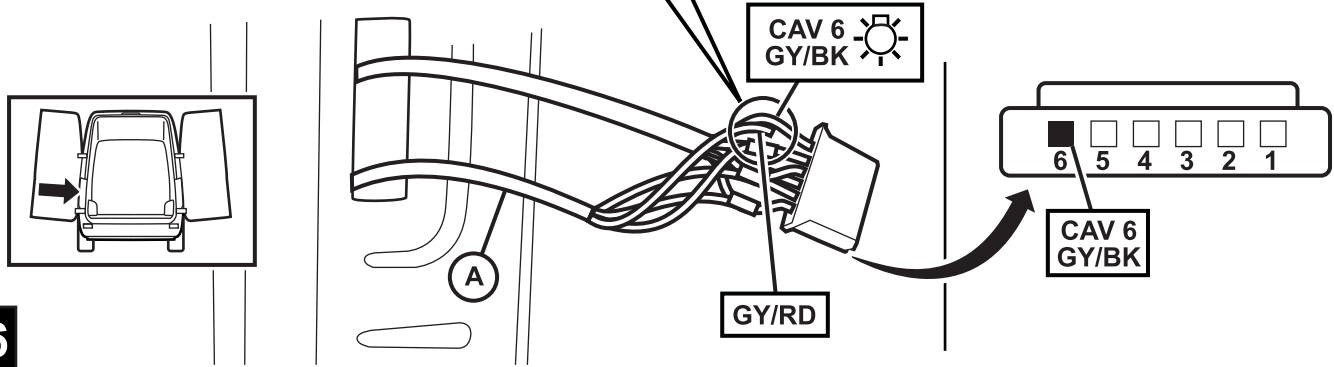


97

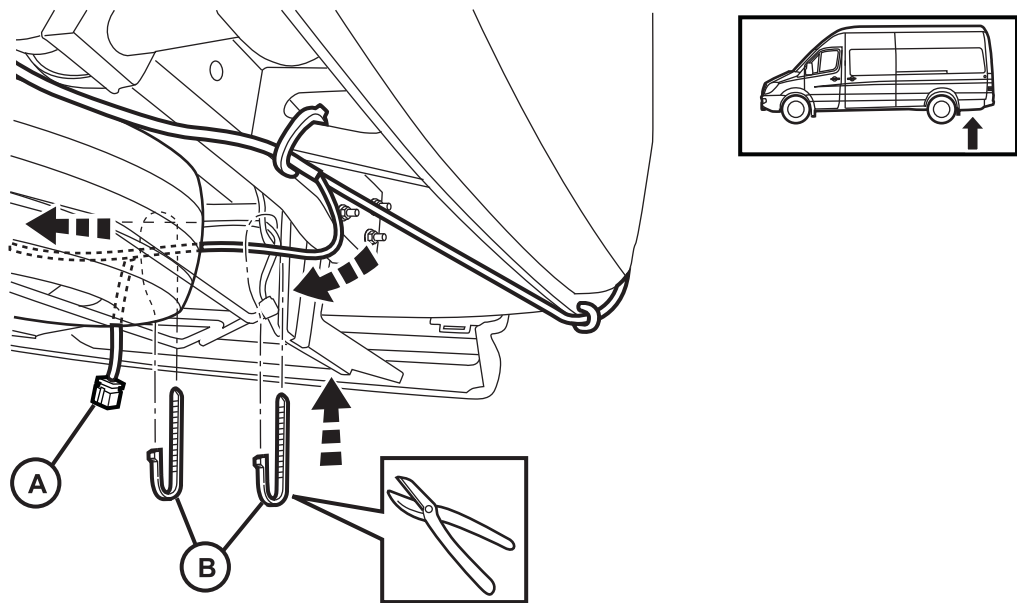


98


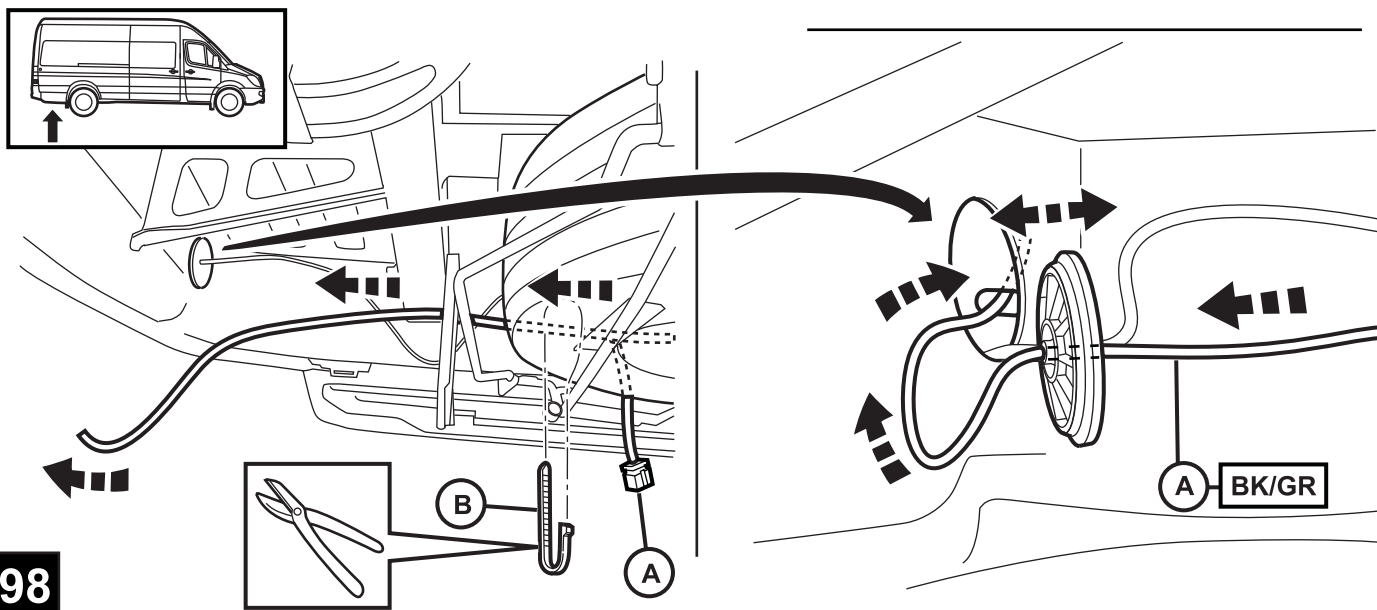


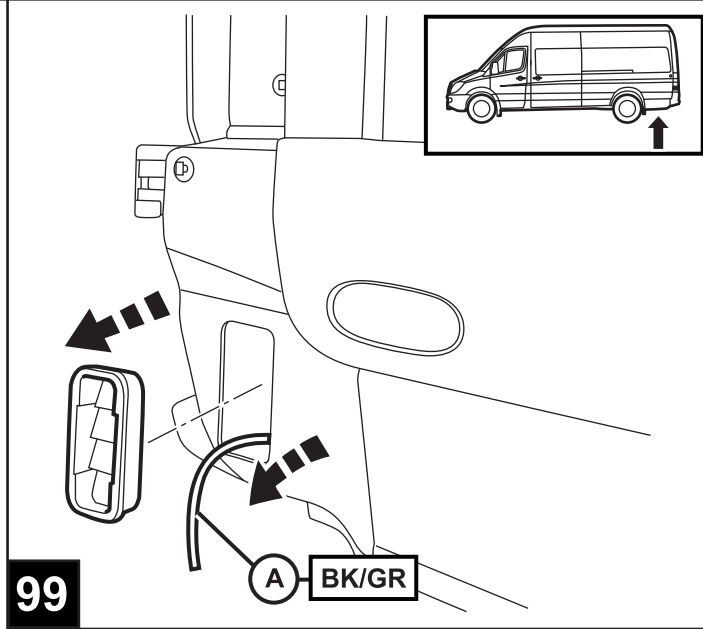


99

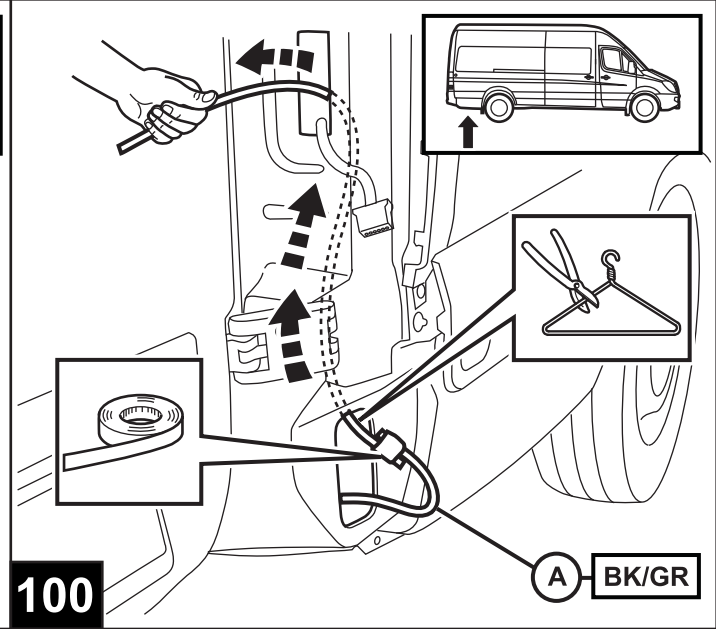


100

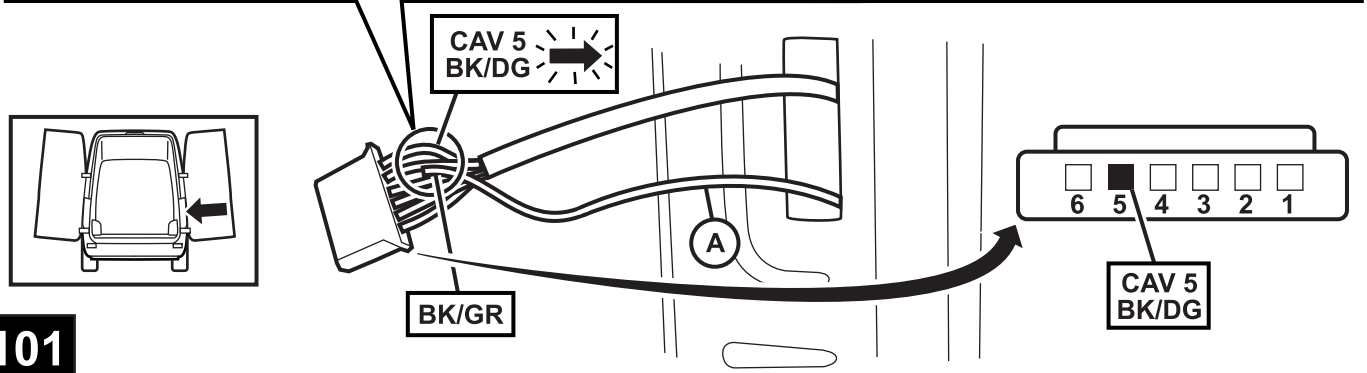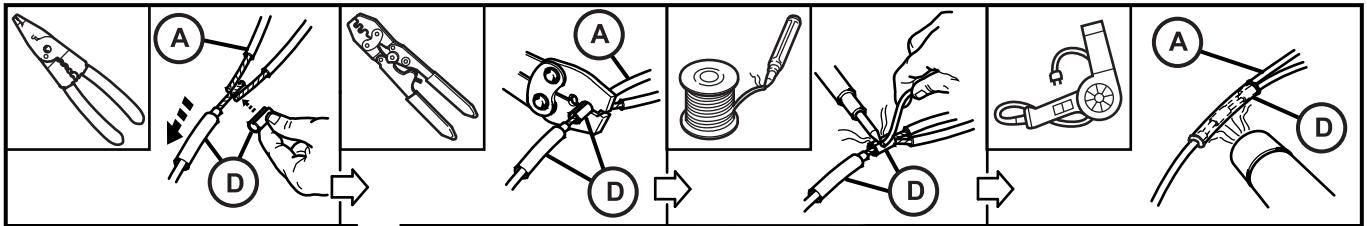

101






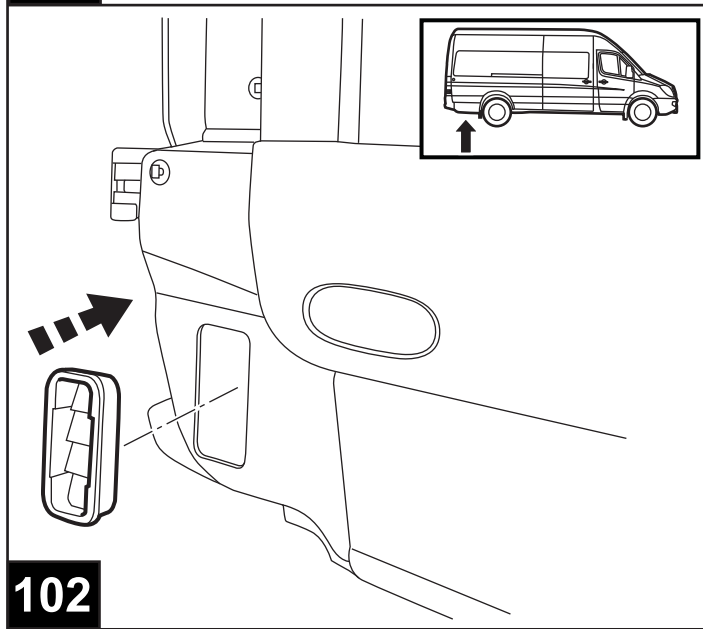


102

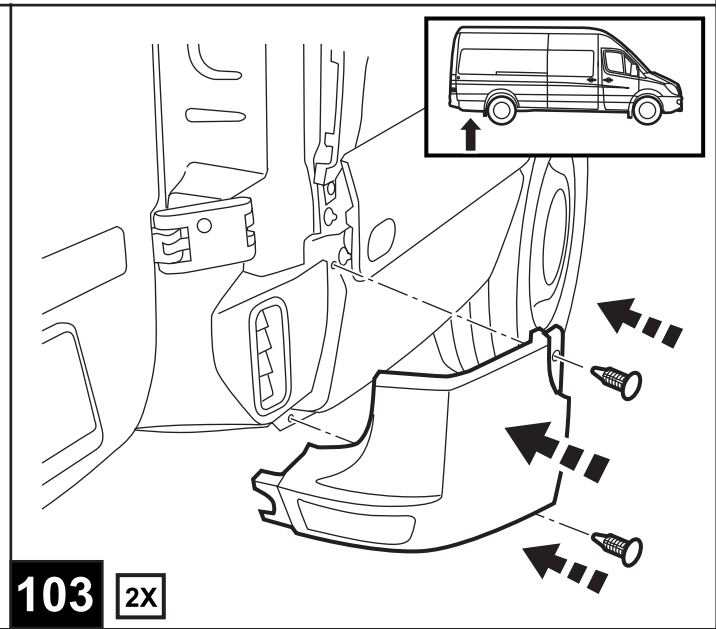


103 2X

170 EXTENDED VAN

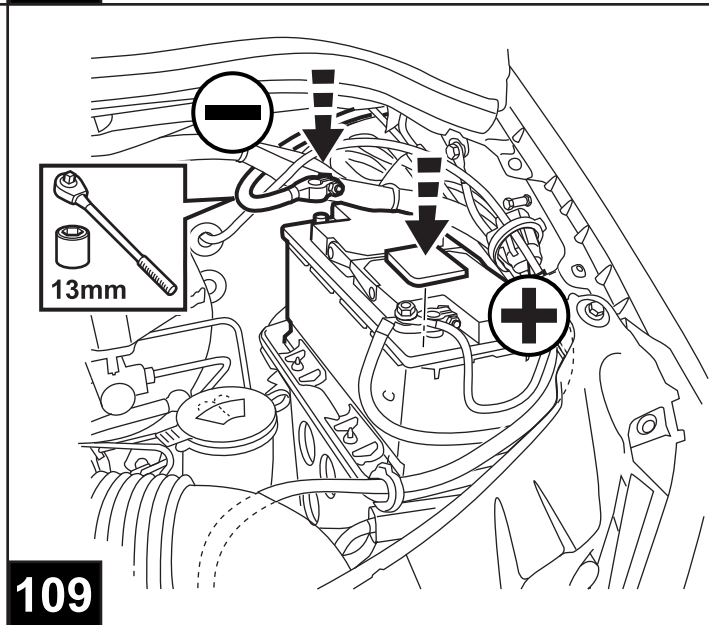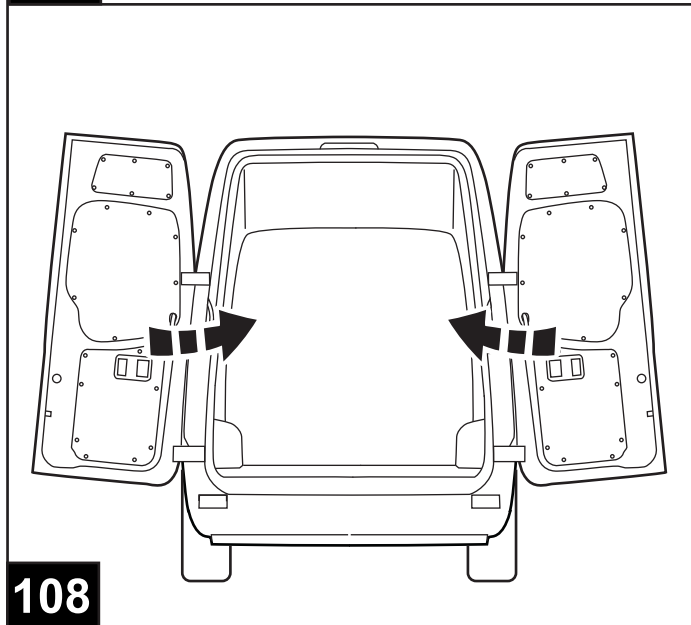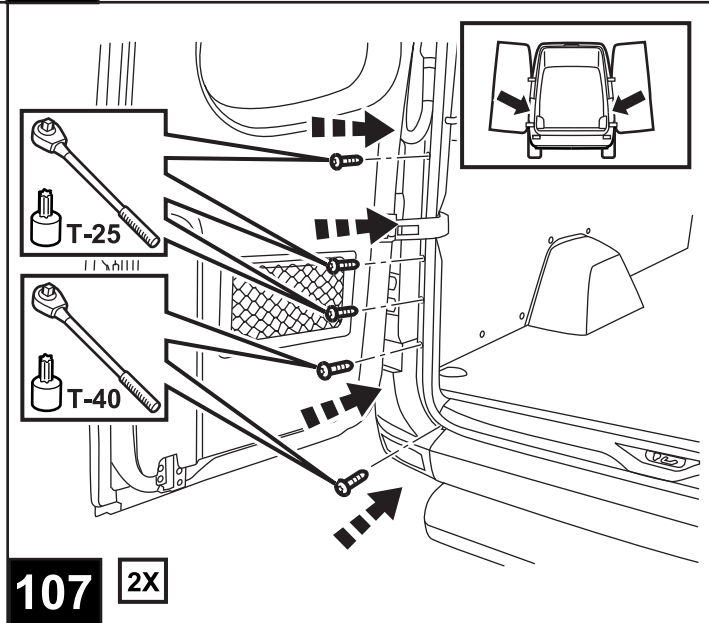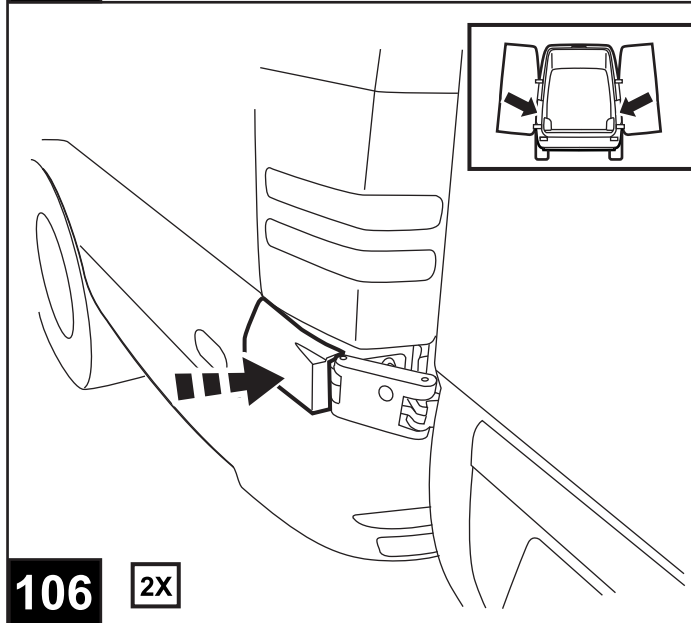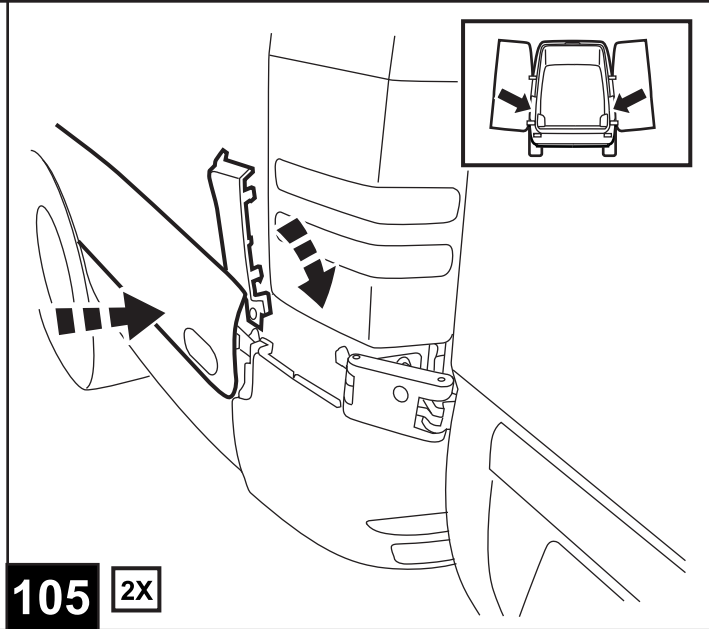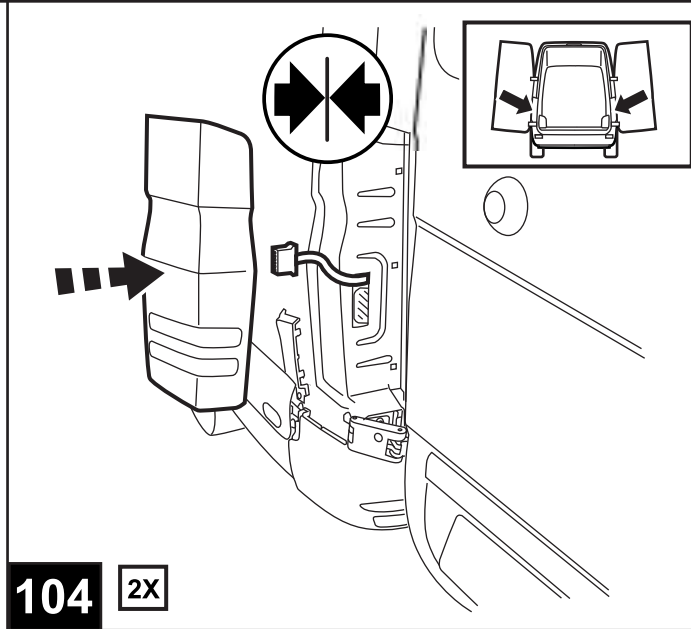

170 EXTENDED VAN

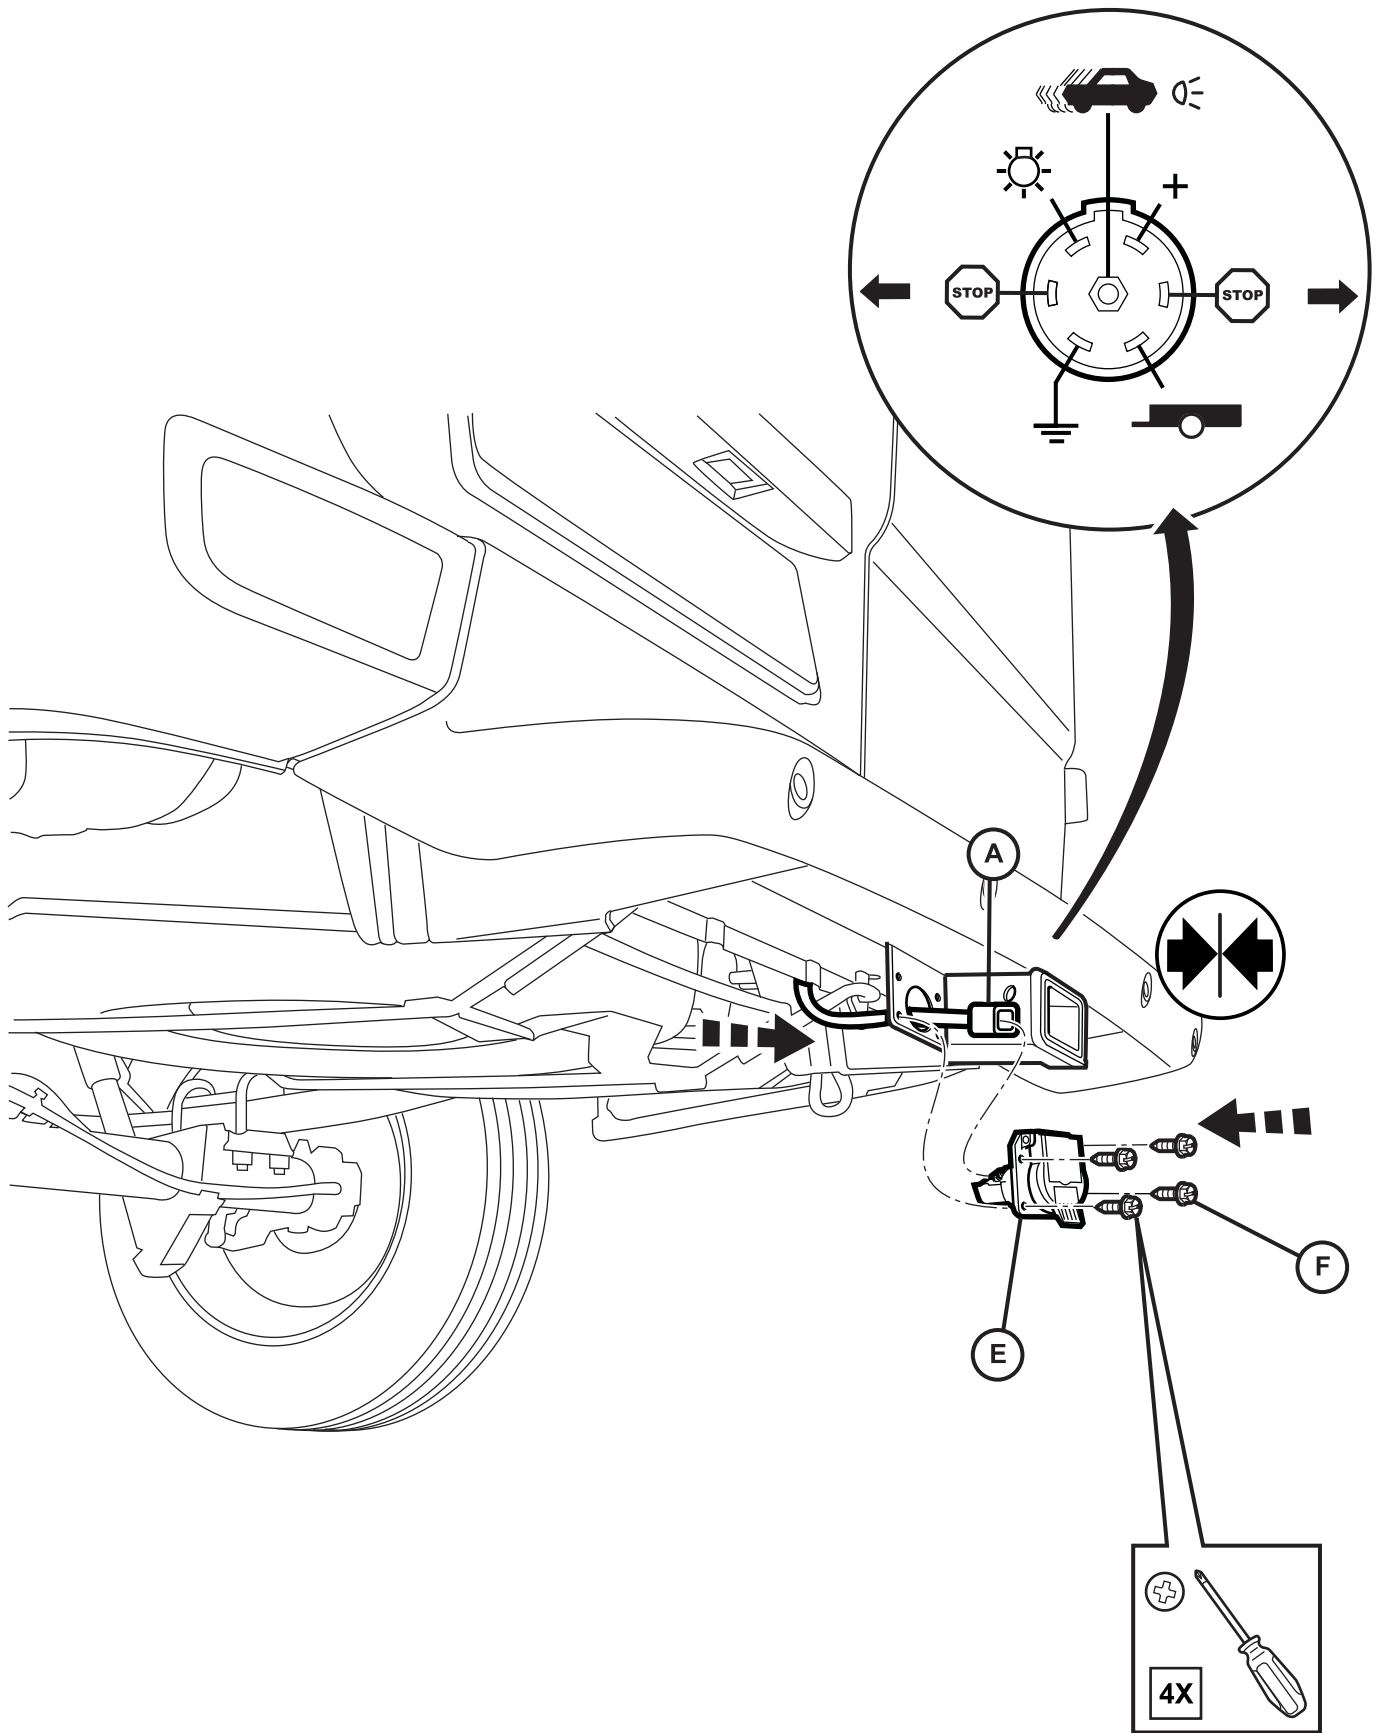

110